


Date	07/07/23
Customer	BABYLISS KOREA
Model No.	AS126K
Description	IB
Job No.	
Reference No.	IB-2226
Revision No.	0
Color	1C(BLACK)+1C(BLACK)
Open Size	63.30(W) X 16.55(H)
Folded Size	9.00(W) X 16.5(H)
Material	10.05(gm) ABS, Acrylic
Prepared by	Betty/ai
Approved by	Ly/nn/KS/R
Ver. no.	Silver/Jan
Supplier	

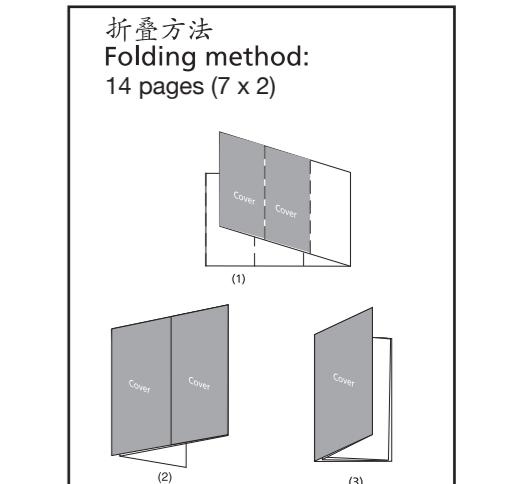

Babyliss®

www.babylisskorea.com

Babyliss 전 제품은 프랑스 Babyliss에서 개발 · 디자인
되고 중국 현지 공장에서 생산되어, 다시 프랑스
Babyliss의 엄격한 품질검사 과정을 거친 제품입니다.

Conair Korea Trading Limited

수입 판매원
콘에어코리아트레이딩주식회사

소비자상담실: 1899-0209
A/S센터: 자사의 A/S대행업체인 필리렉
www.fililec.co.kr의 홈페이지를 통해서 가까운
A/S센터(전국 38개점)을 확인하세요

AS126K

IB-23/226


Babyliss®



DRYING STYLER

This drying styler delivers both on performance and style.

PRODUCT FEATURE

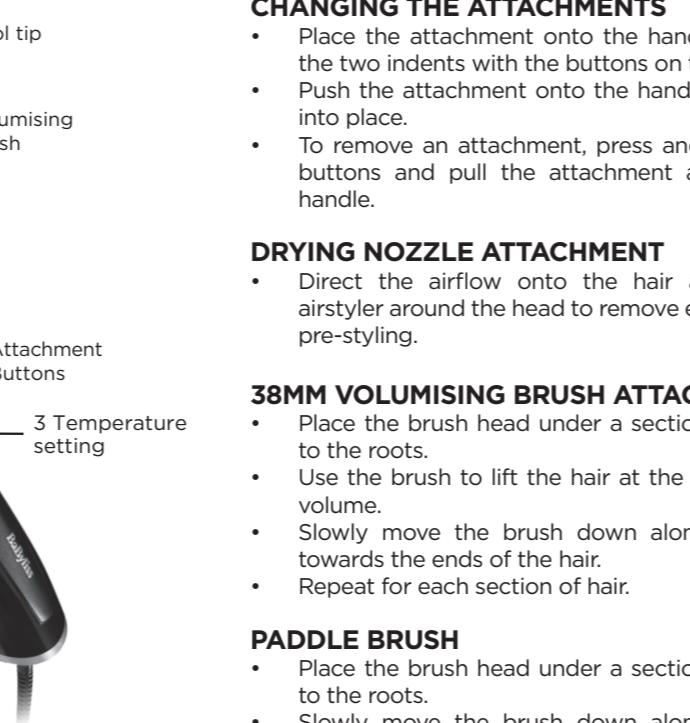

STYLING TIPS

- Ensure the hair is 80% dry and combed through to remove any tangles.
- Create your parting and divide the hair into sections ready for styling.
- Secure the selected attachment onto the handle. To interchange between the attachments, refer to the 'Changing the Attachments' section.
- Slide the switch to the setting suitable for your hair

type to turn the appliance on.

- After use, slide the switch to the '0' position to switch off and unplug the appliance.
- Allow the appliance to cool before storing away.

hair, use the high heat setting.

CLEANING & MAINTENANCE

To help keep your appliance in the best possible condition, please follow the steps below:

General

- Ensure the appliance is switched off, unplugged and cool. To clean the outside of the appliance, wipe with a damp cloth. Make sure that no water enters the appliance and it is completely dry before use.
- Push the attachment onto the handle until it clicks into place.
- To remove an attachment, press and hold the two buttons and pull the attachment away from the handle.

CHANGING THE ATTACHMENTS

- Place the attachment onto the handle and line up the two indents with the buttons on the handle.
- Push the attachment onto the handle until it clicks into place.
- To remove an attachment, press and hold the two buttons and pull the attachment away from the handle.

DRYING NOZZLE ATTACHMENT

- Direct the airflow onto the hair and move the airstyler around the head to remove excess moisture pre-styling.



Cleaning the Filter

- Ensure the appliance is switched off, unplugged and cool.
- Using a soft brush, clean any hair and other debris from the filter.



38MM VOLUMISING BRUSH ATTACHMENT

- Place the brush head under a section of hair, close to the roots.
- Use the brush to lift the hair at the roots to create volume.
- Slowly move the brush down along the section, towards the ends of the hair.
- Repeat for each section of hair.

CAUTION

- Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the styler. Damage will occur at the high flex point of entry into the styler, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

PADDLE BRUSH

- Place the brush head under a section of hair, close to the roots.
- Slowly move the brush down along the section, towards the ends of the hair.
- Repeat for each section of hair.

STORAGE

- When not in use, your styler should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around styler.

HEAT SETTINGS

- There are 2 heat settings plus a cool setting. Slide the switch to the first position to select the cool setting '0', the second position for the low heat 'I', and the third position for the high heat 'II'.

Please note: If you have delicate, fine, bleached or coloured hair, use the low heat setting. For thicker

hair, use the high heat setting.

