

# BaBylissMEN

www.babylisskorea.com

Conair Far East Ltd.,  
A Subsidiary of Conair Corporate USA Conair  
Corporation USA,  
1 Cummings Point Road, Stamford,  
Connecticut 06902 USA

수입 판매원  
콘에이코리아트레이딩주식회사  
서울시성동구성수이로 66  
서울숲드림타워 1304~1306호  
A/S 대표 번호 : 1899-0209  
자사의 A/S 전문대행업체인 필리렉 www.filielec.co.kr  
의 홈페이지를 통해  
가까운 A/S센터(전국 38개점)를 확인하세요

E759K

IB-17/XXX



## POWER TITANIUM CLIPPER

Thanks to the W-tech TITANIUM technology with innovative geometric blade, the BaByliss E791K hair and beard clipper offers a more efficient hair catch, even the thickest hair, for perfect results in a twinkle of an eye.  
Please carefully read the instructions for use below before using the appliance.

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

### SAFETY PRECAUTIONS

**WARNING:** Do not wrap the power supply cord around the clipper. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.

- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.

- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.

- Unplug the unit after each use and before cleaning it.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- To prevent damage to the cord, ensure it is stored without twisting or folding it.
- Before plugging in, read the information about worldwide voltage contained in the operating instructions section of this manual.
- Do not use with a voltage converter.

### PRODUCT FEATURES

- 2 cutting guides for hair, 32 lengths (from 3 to 18mm and from 21 to 36mm, in 1 mm steps)
- 1 precision guide for beard, 5 positions (0,5-1,5-2,5-3,5-4,5 mm)
- 40 mm cutting blade:
  - Moveable blade:** CMS (Chrome-Molybdenum-Stainless Steel); ultra-hardwearing
  - Fixed Blade:** Titanium coating; for longer life.
- Thinning function: only used for cutting hair. It is not available with the beard precision guide.
- ON/OFF switch + TURBO
- Control wheel with built-in locking system for safe cutting length
- Lateral display of selected length
- Power indicator light

### WORLDWIDE VOLTAGE

This clipper will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

### IMPORTANT INFORMATION REGARDING THE NI-MH BATTERIES OF THIS UNIT


To obtain and maintain the longest battery life possible, allow it to charge for 16 hours approximately every three months. Moreover, full battery life of the unit will only be obtained after three complete recharge cycles.

### CHARGING THE CLIPPER

- Plug the cord into the unit and connect the transformer. Before using the clipper for the first time, allow it to charge for 16 hours. Make sure the clipper's switch is in the OFF position.
- Check that the charging indicator light is lit.
- A full charge provides a minimum of 45 minutes' use of the clipper.
- Subsequent charges should also be 8 hours.

### MAINS USE

Connect the transformer into the mains, wait 1 minute and then switch on.

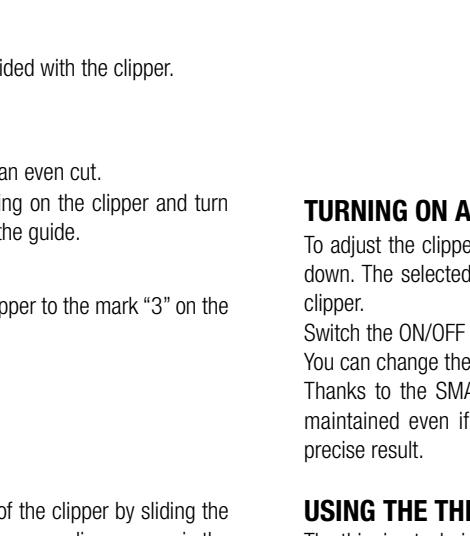

into the ON position.

### IMPORTANT!

Use only the transformer provided with the clipper.

### USE OF THE CUTTING GUIDES

Very practical, the cutting guide guarantees an even cut.

Always attach the cutting guide before turning on the clipper and turn the clipper off before changing or removing the guide.

#### To attach the cutting guide:

- Position the adjustment wheel of the clipper to the mark "3" on the side display.

Switch the ON/OFF button.

You can change the cutting length at any time.

Thanks to the SMART ADJUSTING SYSTEM, the length of the cut is maintained even if the angle of the clipper varies, so it guarantees precise result.

### TURNING ON AND USING

To adjust the clipper's cutting length, turn the grooved wheel (6) up or down. The selected length is displayed on the right or left side of the clipper.

Then put the blades back on the clipper.

Switch the ON/OFF button.

You can change the cutting length at any time.

Thanks to the SMART ADJUSTING SYSTEM, the length of the cut is maintained even if the angle of the clipper varies, so it guarantees precise result.

### USING THE THINNING FUNCTION

The thinning technique allows you to thin out hair to make styling easier.

The thinning function is only used for cutting hair. It is not available with the beard precision guide.

### USER MAINTENANCE

Remove the cutting guide after each use.

Cleaning the clipper blades regularly will maintain their optimal performance.

### Removable blades

To make cleaning easier, the BaByliss clipper blades can be removed.

Make sure the clipper is turned off. Hold the clipper with the blades pointing up and remove them by pressing the top of the blade.

#### To remove the cutting guide:

- Hold the sides of the cutting guide. Press the tab at the rear of the guide to release it.
- Remove the cutting guide by rotating the clipper to the front and lifting the guide off.

Brush the blades using the cleaning brush to remove any hair.

Rinse the blades. The device must never come into contact with water. Let the blades dry in the open air before putting them back onto the device.

### Self-lubricating blades

The blades of your clipper have a reservoir pad that dispenses the amount of oil necessary for your clipper to operate properly, every time.

It is nevertheless recommended that you occasionally refill, when you notice the clipper isn't performing as well.

Remove the blades as described above.

Carefully squeeze a few drops of oil onto the pad.

Then put the blades back on the clipper.



## CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	2/24/2017
Customer	CKTL
Model No.	E791K
Description	IB
Job No.	17BB019
Reference No.	IB-17/087
Revision No.	0
Color	1C(BLACK) + 1C(BLACK)
Open Size	720mm(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Artpaper
Prepared by	Carlos Ho/Penny Peng
Approved by	Jimmy Ng
Vendor	Joas
Supplier	

