

BaByliss® MEN

www.babylisskorea.com

Conair Korea Trading Limited
수입 판매원
콘에어코리아트레이딩주식회사
소비자상담실: 1899-0209
A/S센터: 자사의 A/S대행업체인 필일렉
www.fililec.co.kr의 홈페이지를 통해서 가까운
A/S센터(전국 38개점)을 확인하세요



NE2000K

IB-20/396

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. Never immerse the unit in water or any other liquid.


2. Do not use the unit if it has fallen or if it appears to be damaged.

3. Do not use any accessories other than those recommended by manufacturer.

4. Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.


5. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

PRODUCT FEATURES

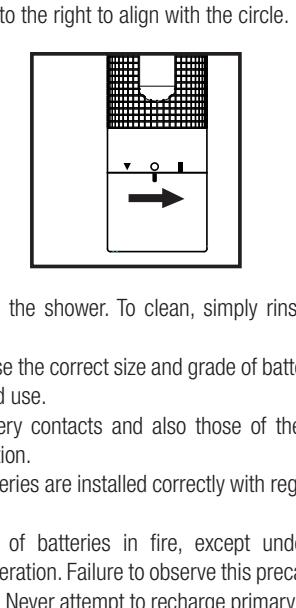


OPERATING INSTRUCTIONS

1. To insert battery, remove compartment cover by turning bottom piece of trimmer to the left, then pulling straight down.

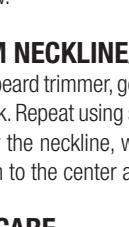


2. Insert an AA alkaline battery, positive terminal downward. (If you are not going to use the device for long periods of time or if the battery is dead, remove the battery from the device. This will increase the battery's life.)

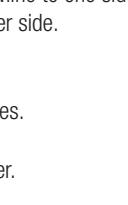


3.

- After inserting the battery, align the arrow with the notch on battery cover and turn to the right to align with the circle.

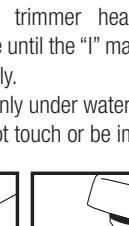

4.

- Gently place the desired cutting head on the device, then lock by turning the cutting head so that the two marks line up (① and ②).

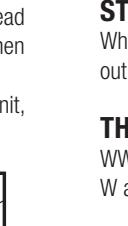

5.

- Do not use in the shower. To clean, simply rinse trimmer blade under faucet.

HOW TO USE

TO TRIM NOSE/EAR HAIR

Using the special circular cutting head for nose and ears, gently insert the cutting head into the nostril or ear and move it slightly back and forth to cut the hair.

NOTE: To trim nose hair, insert trimmer at entry of nostrils and start trimming the lower hairs until no longer visible.

To trim ear hair, guide the trimmer around the outer surface of the ear.

6.

7.

8.

9.

10.

11.

12.

13.

14.

15.

16.

17.

18.

19.

20.

21.

22.

23.

24.

25.

26.

27.

28.

29.

30.

31.

32.

33.

34.

35.

36.

37.

38.

39.

40.

41.

42.

43.

44.

45.

46.

47.

48.

49.

50.

51.

52.

53.

54.

55.

56.

57.

58.

59.

60.

61.

62.

63.

64.

65.

66.

67.

68.

69.

70.

71.

72.

73.

74.

75.

76.

77.

78.

79.

80.

81.

82.

83.

84.

85.

86.

87.

88.

89.

90.

91.

92.

93.

94.

95.

96.

97.

98.

99.

100.

101.

102.

103.

104.

105.

106.

107.

108.

109.

110.

111.

112.

113.

114.

115.

116.

117.

118.

119.

120.

121.

122.

123.

124.

125.

126.

127.

128.

129.

130.

131.

132.

133.

134.

135.

136.

137.

138.

139.

140.

141.

