

**BaByliss**  
PARIS

[www.babylisskorea.com](http://www.babylisskorea.com)

BaByliss 전 제품은 프랑스 BaByliss에서 개발·디자인  
되고 중국 현지 공장에서 생산되어, 다시 프랑스  
BaByliss의 엄격한 품질검사 과정을 거친 제품입니다.

Conair Far East Ltd.,  
A Subsidiary of Conair Corporate USA Conair  
Corporation USA.,  
1 Cummings Point Road, Stamford,  
Connecticut 06902 USA

#### 수입 판매원


콘에어코리아트레이딩주식회사  
서울시성동구성수대로 66  
서울숲드림타워 1304~1306호

A/S 대표 번호 : 1899-0209  
자사의 A/S 전문대행업체인 필일렉  
[www.fililec.co.kr](http://www.fililec.co.kr) 의 홈페이지를 통해서  
가까운 A/S센터(전국 38개점)를 확인하세요

2289XLK

IB-17/013

**BaByliss**  
PARIS

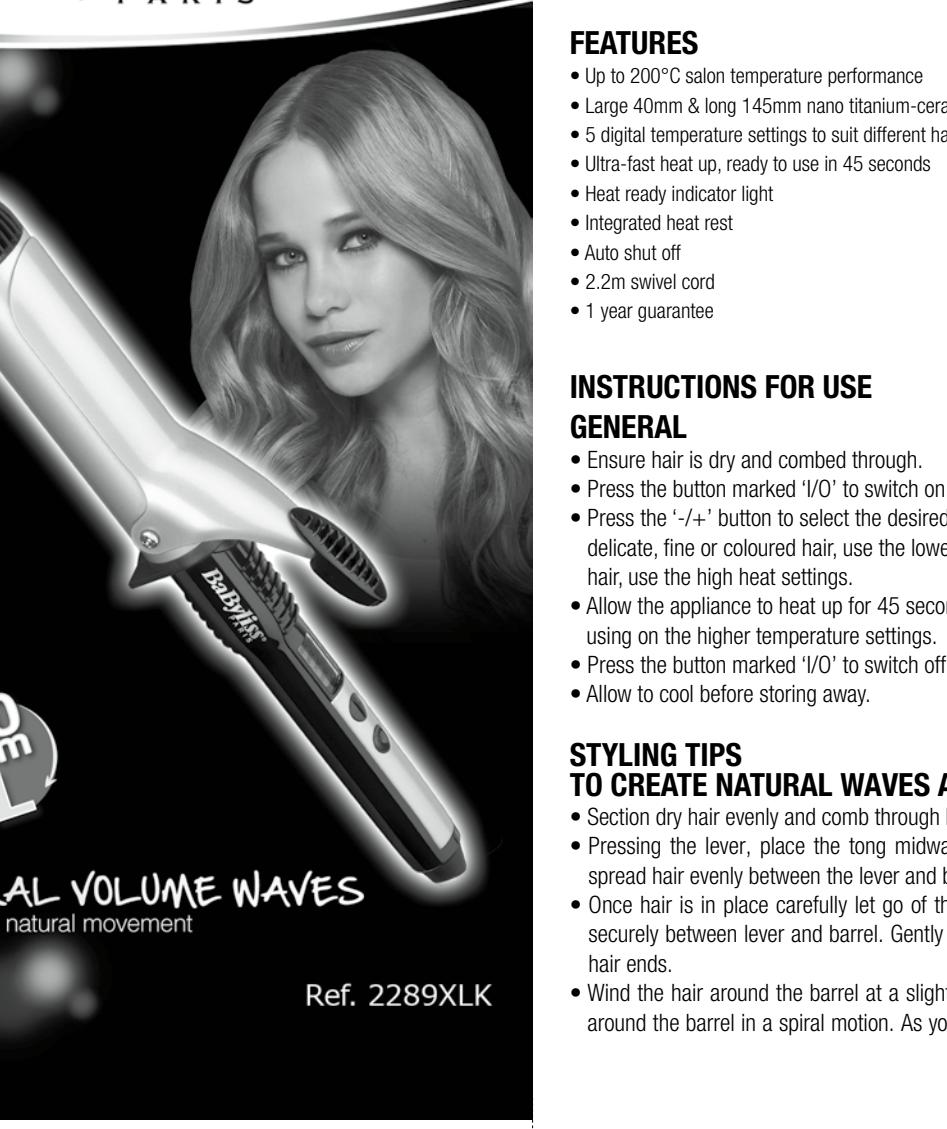

### VOLUME WAVES 40MM CURLING IRON

The 40mm barrel is perfect for creating soft natural waves and adding volume to styles. The nano titanium-ceramic barrel gives a smooth, shiny finish.

#### FEATURES

- Up to 200°C salon temperature performance
- Large 40mm & long 145mm nano titanium-ceramic coated barrel
- 5 digital temperature settings to suit different hair types
- Ultra-fast heat up, ready to use in 45 seconds
- Heat ready indicator light
- Integrated heat rest
- Auto shut off
- 2.2m swivel cord
- 1 year guarantee

#### INSTRUCTIONS FOR USE

##### GENERAL

- Ensure hair is dry and combed through.
- Press the button marked 'I/O' to switch on.
- Press the '-'/'+' button to select the desired temperature. If you have delicate, fine or coloured hair, use the lower heat settings. For thicker hair, use the high heat settings.
- Allow the appliance to heat up for 45 seconds. Allow slightly longer if using on the higher temperature settings.
- Press the button marked 'I/O' to switch off and unplug the appliance.
- Allow to cool before storing away.

#### STYLING TIPS TO CREATE NATURAL WAVES AND MOVEMENT

- Section dry hair evenly and comb through before styling.
- Pressing the lever, place the tong midway up the hair section and spread hair evenly between the lever and barrel.
- Once hair is in place carefully let go of the lever so the hair is held securely between lever and barrel. Gently slide the tong down to the hair ends.
- Wind the hair around the barrel at a slight angle, so the hair wraps around the barrel in a spiral motion. As you wind the hair around the

barrel, ensure the hair is distributed evenly so the entire section is touching the barrel, try not to overlap the hair.

- Hold in place for 5-8 seconds depending on the texture and length of your hair.
- To remove the tong from the hair, press the lever and pull tong away.
- Allow the curl to cool before styling.
- Repeat as necessary.

#### TO ADD VOLUME TO THE ROOTS

- Section dry hair evenly and comb through before styling.
- Lift up a section of hair and place the tong underneath the hair close to the root being careful not to touch the scalp.
- Pull the hair down taught over the barrel for 5-8 seconds depending on the texture of the hair.
- Slide the tong out from under the hair section. To "set" the style, do not comb or brush hair until it cools.
- Repeat as necessary.

#### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

#### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.



Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



#### USER MAINTENANCE

Your appliance is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

#### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

#### STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

- 6. Unplug the unit immediately if you have problems when using it.
- 7. Do not use any accessories other than those recommended by manufacturer.
- 8. Unplug the unit after each use and before cleaning it.
- 9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
- 10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- 11. Allow the unit to cool before storing.
- 12. To prevent damage to the cord, ensure it is stored without twisting or folding it.

#### THE DATE CODE MENTIONED

WWYYXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

### CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	01/13/2017
Customer	BaByliss-Korea
Model No.	2289XLK
Description	IB
Job No.	17BB006
Reference No.	IB-17/013
Revision No.	0
Color	1C(BLACK) + 1C(BLACK)
Open Size	540mm(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Art paper
Prepared by	Carlos Ho
Approved by	Jimmy Ng/Anna Son
Vendor	MILLPLAN
Supplier	

折叠方法  
Folding method:  
12 pages (6 x 2)



## 볼륨 웨이브 아이론

40mm 바렐은 가장 이상적인 내츄럴 웨이브를 연출 할 수 있으며, 나노 티타늄 세라믹 코팅으로 부드럽고 윤기 있는 모발을 부여합니다.

## 제품 특징

- 프로파서널용 200°C 온도 설정
- 넓고 길어진 40mm & 145mm 나노 티타늄 세라믹 코팅 바렐
- 모발 상태에 맞는 5단계 디지털 온도 설정
- 45초 안에 사용 할 수 있는 빠른 예열 속도
- 온도표시등
- 거치대
- 자동 전원 차단 기능
- 2.2M 희전식 코드
- 1년 무상 보증

## 사용 설명서

- 모발이 완벽히 건조된 상태에서 빗질 후, 사용합니다
- 'I/O' 버튼을 눌러 전원을 켜줍니다.
- '-' 버튼을 눌러 온도를 설정 합니다.  
모발이 약하거나 염색모의 경우에는 낮은 온도로, 굵은 모발의 경우에는 높은 온도로 설정하시기 바랍니다.
- 30초 정도 예열 후 사용하시기 바라며, 높은 온도 설정 시, 30 초 이상 예열 후 사용하시기 바랍니다.
- 사용 후에는 'I/O' 버튼을 눌러 스위치 전원을 끄고 플러그를 뽑아 주시기 바랍니다.
- 보관 전, 열을 충분히 식혀 주시기 바랍니다.

## 네츄럴 웨이브 스타일링 방법

- 스타일링 전, 빗질을 하여 동일한 양의 모발로 나누어 줍니다.
- 집게를 눌러, 선택한 모발 양을 집게와 바렐 사이에 넣고 고르게 펴줍니다.
- 원하는 일정 모발 양을 안전하게 집게와 바렐 사이에 넣고, 집게를 조심스럽게 놓아주면서, 아이론을 머리 끝부분까지 밀어 내려줍니다.
- 바렐에 머리를 자연스럽게 나선형으로 감아줍니다. 모발양을 일정하게 나누어, 반복되어 스타일링 되지 않도록 합니다.
- 모발 상태와 길이에 따라 5~8초간 유지하여 스타일링 합니다.
- 집게를 눌러 아이론에서 머리를 풀어줍니다.


- 완성된 머리를 식혀 스타일링을 고정하여 줍니다.
- 스타일링이 완성될 때까지 반복하여 줍니다.

## 뿌리 볼륨 스타일링 방법

- 스타일링 전, 빗질을 하여 동일한 양의 모발로 섹션을 나누어 줍니다.
- 선택된 모발 양을 위로 향하게 잡고, 아이론을 모발 뿌리 부분 가까이에 위치하도록 합니다, 단 두피에 닿지 않도록 조심하시기 바랍니다.
- 아래 방향으로 모발 상태에 따라 5~8초간 당겨 내려 줍니다.
- 연출한 모발을 자연스럽게 아이론에서 풀어줍니다. 완성된 컬을 고정을 위해서는 빗질이나 브러쉬를 하지 않고 식혀 줍니다.
- 스타일링이 완성 될 때까지 반복하여 줍니다.

## 자동 전원 차단 장치

이 기기는 안전을 위하여 자동적으로 전원이 차단될 수 있도록 설정 되어 있습니다. 60분 이상 켜 있을 경우, 자동으로 전원이 차단됩니다. 계속해서 사용하고자 할 경우, 'I/O' 전원 버튼을 다시 눌러 사용 하시면 됩니다.

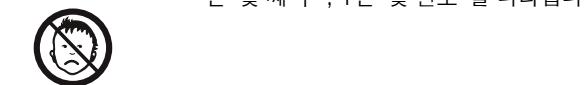

## 사용자 주의 사항

본 제품은 별도의 유지 보수를 필요로 하지 않습니다. 윤활유 첨부를 필요로 하지 않습니다. 적절한 사용을 위해서는 제품을 반드시 깨끗한 상태로 유지 하여야 합니다. 청소가 필요한 경우, 전원을 끄고 제품이 차가워진 상태에서 마른 수건을 이용하여 뒤집어서 청소합니다. 만일 코드 또는 제품의 파손으로 작동 되지 않을 시에는 바비리스 서비스 센터로 연락 하시어 수리하십시오. 소비자가 직접 제품을 수리하려 시도 하지 마십시오.



## 위험

절대로 전선을 잡아당기거나 꼬는 등 심하게 구부리지 마시고 전선으로 기기를 너무 단단히 감지 마세요. 이는 전선의 손상 및 파열, 핵선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품사용을 즉시 중단하시기 바랍니다.

## 보관 방법

헤어 용품으로 생성된 잔류물이 남아 있을 수 있기 때문에 기기는 반드시 깨끗이 청소한 후 보관해야 합니다. 또한 아이들 손이 닿지 않는 안전한 곳, 건조한 곳에서 보관해야 합니다.

- 원성된 머리를 식혀 스타일링을 고정하여 줍니다.
- 중요! 기기를 물에 담그거나 기타 액체에 빠뜨리지 마십시오.

## 주요 안전 주의사항

제품 사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하여야 합니다.

## 사용 전 반드시 사용설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.

## 주의사항

**경고:** 제품 포장에 사용된 폴리에틸렌재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다.

어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이침대, 유모차, 어린이 놀이지역 안에서는 절대 사용하지 마십시오. 포장재는 장난감이 아닙니다. 얇은 막 물질이 코나 입에 붙어 유아나 어린이가 질식될 수 있습니다.



## 경고:

제조일은 본 제품에 WWYYXX 형태로 표기되어 있습니다. W는 '몇 째 주', Y는 '몇 년도'를 나타냅니다.




1. 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑아주시오. 전원 스위치가 꺼져있더라도 물꼭자에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 옥실의 잔류전류 용량은 30mA이어야 합니다. 옥실 등에서 사용시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.




2. 물과 같은 액체에 절대 담그지 마십시오.
3. 전원 코드가 손상되었을 경우 위험방지를 위해 반드시 바비리스서비스센터에 연락하여 수리를 받으셔야 안전 합니다.



4. 떨어지거나 손상된 기기는 사용하지 마십시오.
5. 플러그가 연결되어 있거나 전원이 켜진 상태로 기기를 방치해두지 마십시오.



6. 사용상에 문제가 발생하면 즉시 전원을 끄십시오.
7. 제조업체가 공급하는 부품외의 부품은 사용하지마십시오.



8. 제품 사용후나 제품세척전에는 반드시 전원을 끄십시오.
9. 기기의 고온표면이 피부 (특히, 귀, 눈, 얼굴 및 목 부위)에 닿지 않도록 주의하셔야 합니다.

닫지 않도록 주의하셔야 합니다.

10. 본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안되며, 사용시엔 반드시 안전을 책임지는 보호자의 지도로 사전 사용설명교육후 사용하도록 합니다. 특히, 어린이가 장난감처럼 사용하지 않도록 각별히 주의해 주십시오.

11. 제품보관시에는 반드시 기기의 열기가 식은 상태에서 보관 하도록 합니다.

12. 전원코드에 손상을 막기위해 전선으로 기기를 감지 마시고 고거나 접힌 상태로 보관하지 마십시오.

## 제조일 표기

제조일은 본 제품에 WWYYXX 형태로 표기되어 있습니다. W는 '몇 째 주', Y는 '몇 년도'를 나타냅니다.

4. 본 증서를 잘 보관하시고 서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

보증기간:

구입일로부터 1년

제품명:

모델명:

구입일자:

구입처(상호):

고객성명:

성별 남 • 여

고객주소:

전화번호:

\*본 사용설명서에 예시되어 있는 제품의 사양과 디자인은 예고 없이 변경될 수 있습니다.

수입 판매원:

콘에코리아트레이딩주식회사

서울시성동구성수로 66 서울숲드림타워 1304~1306호

A/S 대표 번호 : 1899-0209

자사의 A/S 전문대행업체인 필일렉 [www.filieec.co.kr](http://www.filieec.co.kr)의 홈페이지를 통해서

가까운 A/S센터(전국 38개점)를 확인하세요

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—

—