

BaByliss
PARIS

www.babylisskorea.com

BaByliss 전 제품은 프랑스 BaByliss에서 개발·디자인
되고 중국 현지 공장에서 생산되어, 다시 프랑스
BaByliss의 엄격한 품질검사 과정을 거친 제품입니다.

Conair Far East Ltd.,
A Subsidiary of Conair Corporate USA Conair
Corporation USA.,
1 Cummings Point Road, Stamford,
Connecticut 06902 USA

수입 판매원

콘에어코리아트레이딩주식회사
서울시성동구성수일로 66
서울숲드림타워 1304~1306호

A/S 대표 번호 : 1899-0209
자사의 A/S 전문대행업체인 필일렉
www.fillelec.co.kr 의 홈페이지를 통해서
가까운 A/S센터(전국 38개점)를 확인하세요

BaByliss
PARIS

2000W Ombre Dryer



Ref. 5736K

- 본 제품을 사용하기 전에 반드시 읽어 보시고 숙지한 후 사용하시기 바랍니다.
- 사용설명서는 본 제품의 사용방법과 사용시 주의 사항이 자세히 기록되어 있으므로 반드시 제품과 함께 보관하십시오.

2000W OMBRE DRYER

This Ombre dryer delivers both on performance and style. Featuring a powerful 2000W motor for fast drying results as well as the added ionic technology to leave hair frizz-free revealing a perfectly smooth finish.

TECHNICAL FEATURES:

1. 2000 Watts for fast drying
2. Ionic conditioning for a frizz-free finish
3. 3 heat / 2 speed settings plus cool shot
4. Slim concentrator nozzle
5. Hanging loop for tidy storage
6. Removable rear filter for easy cleaning
7. 2.2m cord
8. 1 year guarantee

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair can increase these levels, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. Also high levels of static charge cause hair to become “fly-away” and difficult to style. The ion generator produces a stream of negative ions which act to neutralise the static charge, smoothing the scales on the cuticle for shiny, smooth and manageable hair.

HEAT SETTINGS

There are 3 heat and 2 speed settings plus the cool shot button. Use the high heat and high speed settings for initial drying and use the low heat and speed settings for styling and scrunch drying as the hair begins to dry.

COOL SHOT BUTTON

Use the cool shot button on warm hair to rapidly cool the hair and set the style in place for a long-lasting effect.

CONCENTRATOR NOZZLE

Use the slim concentrator nozzle to direct the airflow just where you want it to make styling easier. When using the concentrator nozzle use a low heat and low speed setting.

USER MAINTENANCE

- Towel dry and detangle hair.
- Plug the appliance into a suitable mains socket.
- Select the required heat and speed settings.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

STYLING TIPS

BODY AND VOLUME

To help create extra body and volume in the hair, lean forward so the head is upside down when drying. Direct the airflow towards the roots for maximum lift. When hair is dry brush back into required style.

STRAIGHTENING

To create a smooth straight look, first divide the hair into sections. Attach the slim concentrator nozzle, then using a brush hold the hair taut and roll ends slightly under as you dry.

MAKING WAVES

To create tousled natural-looking waves position head upside down. Using the dryer without the nozzle grasp hair at the roots and scrunch between fingertips whilst drying. When dry move the hair back into required position for a casual, natural look.

CARE OF YOUR HAIRDRYER

To keep your hairdryer in the best possible condition, please follow the steps below:

- Do not wrap the lead around the hairdryer, instead coil the lead loosely by the side of the dryer.
- Do not use the hairdryer at a stretch from the power point.
- Always unplug after use.

CLEANING THE FILTER

- Ensure the appliance is switched off, unplugged and cool.
- Holding the handle of the dryer, grip the rear filter and turn anti-clockwise, as far as the rear filter will turn and pull away from the dryer.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by aligning the grooves and turning clockwise, until the rear filter has clicked back into position.

CAUTION

Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.


WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	05/22/17
Customer	CKTL
Model No.	5736K
Description	IB
Job No.	17BB028
Reference No.	IB-17/163
Revision No.	4
Color	1C(BLACK) + 1C(BLACK)
Open Size	450(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Artpaper
Prepared by	Carlos Ho/Penny Peng
Approved by	Jimmy Ng
Vendor	Sun Luen
Supplier	

折疊方法 Folding method: 12 pages (6 x 2)

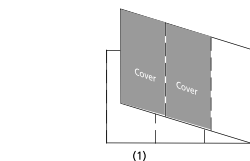

2000W 옴브레 드라이어

2000W 옴브레 드라이어는, 2000W의 강력한 파워로 모발을 빠르게 건조시킵니다. 또한 이온이 방출되기 때문에 모발의 정전기를 예방하고, 반짝이고 부드러운 머릿결을 연출할 수 있습니다.

제품 상세:

- 2000W
- 이온 방출로 정전기 방지 및 모발에 윤기 부여
- 3단계 온도 조절/ 2단계 속도 조절 + 쿨샷 버튼
- 슬립 노즐
- 보관용 고리로 깔끔한 보관
- 청소가 쉬운 탈부착 필터
- 2.2 m 코드
- 1년 보증

이온 테크놀로지

에어컨 바람, 인공 섬유 접촉, 환경 오염 등 현대 생활에서 접할 수 있는 다양한 요소로 인해 모발에 정전기가 쉽게 일어날 수 있습니다. 브러시 및 타월 사용으로도 정전기가 쉽게 발생합니다. 이러한 정전기는 비듬, 큐티클 등을 증가시키고 모발에 손상을 입힙니다. 특히, 정전기가 심할 때에는 머리가 휘날려 헤어 스타일링에 악영향을 미칩니다. 음이온 제너레이터는 음이온을 발생시켜 정전기를 예방하고, 모발의 곱슬거림 등을 줄여 주어 부드러운 머릿결을 유지 하는데 도움을 줍니다.

온도 및 속도 조절

2000W 옴브레 드라이어는 3단계 온도/ 2단계 속도 조절이 가능하며, 냉풍 기능이 있습니다. 머리를 감은 후, 최고 온도와 속도에 맞추어 모발을 먼저 빠르게 건조시킨 후 저 온도/ 저 속도에 맞추어 섬세하게 스타일링을 연출합니다.

쿨샷 버튼

냉풍으로 바람을 쏘이면 스타일링이 더 오래 갑니다. 쿨샷 버튼을 눌러 냉풍을 모발에 쏘어 주세요.

집중 노즐

노즐은 모발에 바람이 집중적으로 가해 질 수 있도록 하는 장치입니다. 집중 노즐을 드라이기에 부착하여 바람을 쏘이면 보다 쉽게 스타일링을 연출할 수 있습니다. 집중 노즐을 사용할 때에는, 저온 / 저 스피드에 맞추어 사용 하십시오.

사용자 유의 사항

- 머리를 감은 후, 타월로 물기를 없앱니다.
- 플러그를 연결 합니다.
- 원하는 온도와 속도에 스위치를 맞춥니다.
- 사용 후에는 전원을 끄고 플러그를 분리 후, 드라이기 열을 식혀 보관합니다.

스타일링 팁

풍성한 볼륨 연출

고개를 숙이고 모발의 위에서부터 아래로 드라이 하면 뿌리 볼륨이 살아나 풍성한 스타일을 연출할 수 있습니다. 드라이로 스타일링을 한 후에는 모발의 열을 식힌 후 빗으로 빗어 마무리 합니다.

스트레이팅닝

찰랑거리는 스트레이트 스타일을 연출할 때에는 모발을 적당량 나누어 잡고 브러시와 집중 노즐로 스타일을 연출합니다. 모발을 단단히 잡고 모발에 브러시를 밀착시켜, 드라이 바람 방향에 따라 브러시를 내려줍니다.

웨이브 연출

자연스러운 내추럴 웨이브를 연출할 때에는, 자연스럽게 웨이브가 생기도록 모발을 헝글어 줍니다. 노즐이 부착되지 않은 드라이기로 고개를 숙이고 드라이를 하며 스타일링 합니다.

중요

- 제품의 최상의 컨디션이 유지될 수 있도록 아래 사항을 준수하십시오.
- 드라이기에 절대로 코드를 감지 마십시오.
 - 위험하오니, 콘센트 바로 근처에서 드라이기를 사용하지 마십시오.
 - 사용 후에는 반드시 플러그를 분리 하십시오.

필터 청소

- 전원이 꺼져있는지 확인 후 플러그를 뽑고 기기를 식혀줍니다.
- 엄지손가락을 위로 향하게 하여 드라이 핸들을 단단히 잡고, 드라이 뒷면의 필터를 시계 반대 방향으로 돌려 빼냅니다.
- 부드러운 빗솔로 필터에 끼어있는 모발이나 먼지를 제거합니다.
- 필터를 자리에 맞게 올바르게 끼워줍니다.

위험

절대로 전선을 잡아당기거나 끄는 등 심하게 구부리지 마시고 전선으로 기기를 너무 단단히 감지 마세요. 이는 전선의 손상 및 파열, 합선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품사용을 즉시 중단하시기 바랍니다.

제품 보관

제품을 사용하지 않을 때는 반드시 전원을 안전하게 분리한 후 제품의 열을 식힌 후 어린이의 손이 닿지 않는 안전하고 건조한 곳에 보관하십시오. 전원에서 분리할 때는 갑자기 잡아 당기거나 너무 팽팽하게 전선을 잡아당기지 마시고 코드로 제품을 감지 마십시오.

주요 안전 주의사항

제품 사용시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하셔야 합니다.

사용 전 반드시 사용설명서를 숙지하여 주십시오.

물에 접촉하거나 빠뜨리시면 안됩니다.

안전주의

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않도록 주의해 주십시오. 이 포장재를 유아용 침대 혹은 유모차 등에서 사용하지 마십시오. 얇은 막이 코나 입에 붙어 유아가 질식될 수 있습니다. 포장재는 장난감이 아닙니다.

경고: 이 제품을 욕조, 샤워기, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.



- 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져 있더라도 물 근처에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 누전 차단기를 설치할 것을 권장합니다. 욕실의 잔류전류 용량은 30mA이하여야 합니다. 욕실 등에서 사용 시 위 사항을 참조하여 전문가와 상의 후 사용하시기 바랍니다.
- 물 또는 액체에 절대로 빠뜨리시면 안됩니다.
- 전원코드가 손상되었을 경우 A/S 센터에서 반드시 수리를 받으셔야 안전합니다.
- 제품 사용시 제품의 통풍구가 막히지 않았는지 확인 후 사용하십시오. 또한 제품후면의 흡입구가 먼지나 머리카락으로 막혀있지 않은지 확인하신 후 사용하십시오.
- 본 제품에는 온도 조절장치가 장착되어 있습니다. 만약 제품의 온도가 지나치게 상승하게 되면, 온도 조절장치에 의해 자동으로 전원이 꺼지거나 열이 더 이상 공급되지 않게 됩니다. 이와 같이 자동으로 꺼지는 일이 발생할 경우는 스위치를 끄시고 전원코드를 뽑으신 후 흡입구가 먼지나 모발에 의해 막히지 않았는지 확인하시고 약 10분 정도 기다리신 후 다시 사용하시기 바랍니다. 플러그와 스위치를 다시 작동시키신 후 사용해 보시고 이런 일이 다시 발생할 경우 즉시 사용을 중단하시고, A/S센터에 연락하십시오.
- 제품을 떨어뜨리거나, 제품이 손상된 것처럼 보일 경우 사용을 중단하시고 A/S센터에 연락하시기 바랍니다.
- 전원을 연결하거나 스위치를 켜 상태에서 제품을 보관하지 마십시오.
- 제품 사용 중 문제가 있을 경우 즉시 플러그를 뽑아 주십시오.
- 제조업체가 공급하는 부속품 외의 부속품을 사용하지 마십시오.
- 제품 사용 후나 제품 세척 전에 반드시 플러그를 뽑아 주십시오.
- 피부, 특히 귀, 눈, 목 등을 제품의 뜨거운 열판 송풍구에 닿지 않도록 각별히 주의하셔야 합니다.
- 본 제품은 영유아, 어린이, 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안되며, 사용 시에는 반드시 보호자의 보호가 필요합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별히 보호해 주십시오.
- 제품 보관 시 반드시 제품을 식혀 주십시오.
- 전원코드의 손상을 막기 위해 꼬거나 구부러서 보관하지 마십시오.

제조일 표기

제조일은 본제품에 WYYYYXX 형태로 표기되어 있습니다. W는 '몇 째 주', Y는 '몇 년도' 를 나타냅니다.

품질보증서	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div><div><div></div></div></div><div><div><div></div></div><div><div></div></div></div><div><div><div></div></div><div><div></div></div></div></div></div><div><div><div>1 본 제품은 품질관리와 제품검사를 거쳐 출고됩니다.</div><div>2 사용자의 정상적인 사용상태에서 하자가 발생했을 경우 보증서의 내용대로 1년 이내에 구입처나 A/S센터에서 제품교환 또는 무상서비스를 받으실 수 있습니다.</div><div>3 보증기간이더라도 비용을 받는 경우는 다음과 같습니다.<div><div><div>- 사용자의 과오로 인한 하자 또는 파손인 경우</div><div>- 부당한 수리 또는 개조로 인한 하자 또는 파손인 경우</div><div>- 천재지변에 의한 하자 또는 파손인 경우</div><div>- 구매 후 이동 또는 낙하등에 의한 하자 또는 파손인 경우</div><div>- 사용설명서 내의 위험, 경고 또는 주의사항을 지키지 않아 발생한 하자인 경우</div></div></div></div><div>4 본 증서를 잘 보관하시고 서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.</div></div></div></div>	
보증기간:	구입일로부터 1년
제품명:	
모델명:	
구입일자:	
구입처(상호):	
고객성명:	성별 남 • 여
고객주소:	
전화번호:	
*본 사용설명서에 예시되어 있는 제품의 사양과 디자인은 예고 없이 변경될 수 있습니다.	

수인 판매원
콘에어코리아트레이딩주식회사
서울시성동구성수리로 66 서울숲드림타워 1304~1306호
A/S 대표 번호 : 1899-0209
자사의 A/S 전문대행업체인 필일렉 www.filelec.co.kr 의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)를 확인하세요