

BaByliss®

www.babylisskorea.com

Babyliss 전 제품은 프랑스 Babyliss에서 개발 · 디자인
되고 중국 현지 공장에서 생산되어, 다시 프랑스
Babyliss의 엄격한 품질검사 과정을 거친 제품입니다.

Conair Korea Trading Limited

수입 판매원
콘에어코리아트레이딩주식회사

소비자상담실: 1899-0209
A/S센터: 자사의 A/S대행업체인 필일렉
www.fillelec.co.kr의 홈페이지를 통해서 가까운
A/S센터(전국 38개점)를 확인하세요

BHT2K

IB-23/208A

BaByliss®



All-in-One
PRECISION TRIMMER

올인원 트리머

BHT2K

ALL-IN-ONE TRIMMER

The detail trimmer is designed for trimming your neckline, sideburns & eyebrows. It's also ideal for body trimming & detailing.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. Use this appliance only for its intended use as described within this instruction booklet.
2. Never immerse the unit in water or any other liquid.
3. Do not use the unit if it has fallen or if it appears to be damaged.
4. Do not use any accessories other than those recommended by manufacturer.
5. Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.
6. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or

knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

7. Do not leave the unit unattended when switched on.
8. Please stop using it immediately and remove batteries if you have problems when using it.
9. Switch off the unit after each use and before cleaning it.
10. Allow the unit to cool before storing.
11. Do not place the appliance on any surface whilst in operation.
12. This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
13. Keep appliance dry.

PRODUCT FEATURE




PREPPING YOUR NEW TOOL INSERTING THE BATTERY

- Your new tool operates using 1x AAA batteries. To insert the batteries, first ensure that the trimmer is switched off, then remove the battery compartment cover at the back of the appliance by pulling straight down.
- Align the 1x AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips. Insert the negative end of each battery first so it will slip easily into position.
- If the appliance remains unused for a while or if the batteries have run down, remove them from the appliance. This will increase the life of the trimmer.
- After inserting the batteries, replace the battery compartment cover to its original position by pushing it in and up until it clicks into place.
- Always purchase the correct size and grade of batteries most suitable for intended use.
- Clean the battery contacts and also those of the appliance prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.
- When the batteries have run down, they should be disposed of at a recycling centre to safeguard the environment. If the batteries leak avoid touching them and dispose of them at a recycling centre.
- Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries, as this may cause leakage, fire, or explosion.

BEFORE USING

- Always inspect the trimmer for noticeable signs of damage.
- Always inspect the trimmer before use to ensure the blades are free from hair, debris etc.
- Ensure the batteries are correctly inserted before use.



- For best performance use on clean, dry hair that has been combed until tangle-free.

USING THE COMB GUIDES

This trimmer comes with 2 comb guides for precise trimming of your neckline, sideburns & eyebrows.

Small comb - 4mm	For trimming sideburns
Large comb - 7mm	For trimming eyebrows

ATTACHING A COMB GUIDE

To attach a comb guide, ensure that the trimmer is switched off. Slide the comb guide over the top of the linear trimming blade. When attaching the comb guide, make sure that the teeth of the comb and the linear trimming blade are facing in the same direction and that the top of the comb guide is even with the top of the trimmer.

REMOVING A COMB GUIDE

To remove the comb guide, ensure the appliance is switched off. If you want to completely remove hair, use the linear trimming blade without the comb guide. The comb guides are great for pretrimming and at-length trimming.

CAUTION: When removing a comb guide attachment, be careful not to cut your fingers as the blades are sharp.

TRIMMING TIPS

USING THE TRIMMING BLADE

1. Switch the trimmer on by sliding the On/Off switch upwards so that the "I" marking is visible.
2. Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth. It is suggested to trim the hair in the direction of hair growth, as trimming against the direction of growth could cause a rash or irritation.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest trim possible.
4. Move the trimmer slowly and carefully, so as not to

cut any hair you do not intend to trim.




5. Trim, shape and define your facial hair as needed.

NOTE: Be careful not to apply excess pressure to the blade, as this may damage the blade and can result in injury to the skin during trimming.

TRIMMER CLEANING & MAINTENANCE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. To ensure longlasting performance of your trimmer, it is important to clean the blades after every use. The blades are washable for easy cleaning.

1. To remove the trimming blade for cleaning, turn the head counter clockwise until the "I" mark aligns with the "•" mark, then lift the head gently.
2. Take a small brush and brush away any loose hairs that have collected in the blades.
3. Rinse the trimming blades under running water.
4. For proper functioning of the trimmer, the handle cannot touch or be immersed in water. Instead, simply wipe with a cloth that has been dampened in water and mild detergent.
5. After cleaning, make sure to shake off excess water and dry the head of the trimming blade before replacing onto the handle.
6. To re-attach the trimming blade, align the "I" mark on the head with the "•" mark on the body and then turn clockwise until the "I" marks are aligned and locked into position.

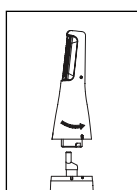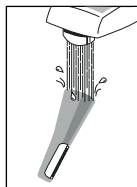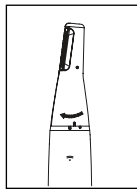

NEVER IMMERSE THE HANDLE OF THE TRIMMER IN WATER.


THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	9/1/2023
Customer	CKTL
Model No.	BHT2K
Description	IB
Job No.	
Reference No.	IB-23/208A
Revision No.	0
Color	1C(BLACK) + 1C(BLACK)
Open Size	630mm(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Artpaper
Prepared by	Betty Bai/ Ken Xiong
Approved by	Ken Xiao/ Lynn Son
Vendor	Paiter
Supplier	

折叠方法
Folding method:
14 pages (7 x 2)

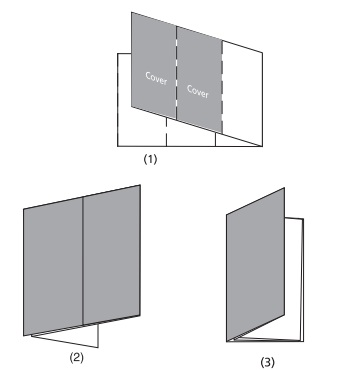

올인원 트리머

본 제품은 눈썹, 구렛나루, 넥 라인 등을 정밀하게 정리 할 수 있도록 설계되어 있습니다. 정밀한 트리밍이 필요한 곳에 사용하시면 됩니다.

주요 안전 주의사항

어린이가 있는 경우를 포함하여 전기용품을 사용할 때에는 항상 다음과 같은 기본적인 안전 수칙을 반드시 지켜 주세요.

사용 전 반드시 사용 설명서를 숙지해 주세요 절대 물에 접촉하거나 빠뜨리면 안됩니다.

안전 주의사항

경고: 제품 또는 포장에 있는 폴리에틸렌 봉지는 위험할 수 있습니다. 이 봉지는 아기와 어린이의 손이 닿지 않는 곳에 보관하세요. 유아용 침대, 유모차 또는 놀이 공간에서 사용하지 마세요. 얇은 필름 막이 코나 입에 붙어 유아나 어린이가 질식할 수 있습니다. 포장재는 장난감이 아닙니다.

경고: 본 제품을 욕조, 샤워장, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마세요.

- 이 기기는 사용 설명서에 설명된 용도로만 사용하세요.
- 기기를 물이나 기타 액체에 잠그지 마세요.
- 기기가 떨어진 경우에 손상된 것처럼 보이면 사용하지 마세요.
- 제조업체에서 권장하는 것 이외의 액세서리는 사용하지 마십시오.
- 칼날에서 블레이드의 이빨이 빠진 상태로 기기를 사용하지 마십시오. 상해를 유발 할 수 있습니다.
- 본 제품은 움직임이 불편한 사람, 영유아, 어린이, 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용 되어서는 안되며

사용시에는 반드시 안전을 책임지는 보호자의 지도로 사전 사용 설명 교육 후 사용하도록 합니다.

- 전원이 켜져 있는 상태로 내버려 두지 마세요.
- 사용 중에 문제가 발생한 경우 즉시 사용을 중단하고 건전지를 제거하세요.
- 사용 후 기기의 전원을 끄고 청소하세요.
- 기기가 식은 후에 보관하세요.
- 작동 중에는 기기를 어떤 곳에도 올려두지 마세요.
- 이 기기는 어린이가 사용, 청소 또는 관리하지 않아야 합니다. 어린이의 손이 닿지 않는 곳에 보관하세요.
- 제품을 건조된 상태로 보관하세요.

제품 특징




새로운 도구 사용 전 준비

건전지 삽입

- 본 기기는 AAA 건전지를 사용합니다. 건전지를 삽입하려면 먼저 트리머가 꺼져 있는지 확인한 후, 기기 뒷면의 건전지 덮개를 아래로 당기세요.
- AAA 건전지 1개를 표시된 전지의 +/- 를 확인 후 동일한 방향으로 넣어주세요. 각 건전지의 - 극 끝부분을 먼저 삽입하여 쉽게 끼워 줍니다.
- 제품을 사용하지 않거나 건전지가 방전된 경우에는 건전지를 제거하세요. 트리머의 수명에 도움이 됩니다.
- 건전지를 넣으신 후에는 건전지 덮개를 원래 위치로 가볍게 누르면서 밀어주세요.
- 사용 용도에 맞는 건전지를 구입하세요.
- 건전지 및 기기의 전지 접촉부를 먼저 깨끗이 닦아 주세요.
- 사용한 건전지는 버리고 안전하게 처리하세요.
- 오래된 건전지와 새 건전지를 함께 사용하지 마세요.
- 전지가 방전된 경우 환경을 보호하기 위해 재활용 센터에서 폐기해야 합니다. 전지가 누출되면 접촉을 피하고 재활용 센터에서 폐기하세요.
- 건전지를 절대 불에 버리지 마세요. 폭발이 발생할 수 있습니다.
- 건전지는 충전이 불가능하니 충전 하지 마세요. 이는 누출, 화재 또는 폭발을 초래할 수 있습니다.
- 에너지저전 리튬/이온 건전지를 사용하시면 더 오래 사용 하실 수 있습니다.

사용 전 주의사항

- 사용하시기 전에 손상된 부분이 없는지 확인하세요.
- 사용하시기 전에 트리머에 이물질이 없는지 확인하세요.
- 사용 전에 건전지가 올바르게 삽입되어 있는지 확인하세요.



- 최적의 퍼포먼스를 위해 깨끗하고 영키지 않은 모발에 사용하세요.

덧빗 사용 가이드

제품과 함께 2개의 덧빗이 함께 제공됩니다.

작은 덧빗 - 4mm	구렛나루 트리밍
큰 덧빗 - 7mm	눈썹 트리밍

덧빗 부착 가이드

덧빗을 부착할 때에는 트리머가 꺼져 있는지 확인하세요. 덧빗을 와이드 블레이드 위로 비스듬하게 끼우세요. 덧빗을 부착하실 때에는 블레이드가 같은 방향을 향하고, 덧빗의 윗부분이 트리머의 윗부분과 맞닿도록 하세요

덧빗 제거하기

덧빗을 제거하기 전에 제품이 꺼져 있는지 확인하세요. 모발을 완전히 없애기 위해서는, 덧빗 없이 블레이드로만 사용하세요. 덧빗을 끼우면 길이에 맞게 트리밍 할 수 있습니다.

주의: 덧빗을 제거할 때는 칼날이 날카로우니 손가락을 다치지 않도록 주의하십시오.

트리밍 TIP

- “On/Off” 스위치를 위로 슬라이드하여 “I” 표시가 보이도록 트리머를 켭니다.
- 트리머를 피부에 90°로 배치하고 머리카락이 자라는 방향으로 다듬어 주세요.
- 머리카락의 자라는 방향으로 트리밍 하는 것이 좋으며, 반대 방향으로 트리밍 시 발진이나 자극을 일으킬 수 있습니다.
- 트리머를 천천히, 조심스럽게 움직여 트리밍 하세요
- 얼굴 형에 따라 트리밍 하세요.




참고: 칼날에 과도한 압력을 가하지 않도록 주의하세요. 이는 칼날을 손상시킬 수 있으며 트리밍 과정에서 피부에 상처를 입힐 수 있습니다.

트리머 청소 및 유지 관리

트리머 칼날은 매우 특수한 용도로 정밀하게 제작되었기 때문에 항상 주의하여 다루어야 합니다. 트리머의 수명을 위해서는 사용 후에 반드시 칼날을 청소하세요. 칼날은 쉽고 간편하게 세척이 가능합니다.

트리머 세척하기

- 트리밍 칼날 제거: 제품을 시계 반대 방향으로 회전시켜 'I' 표시가 ‘•’ 표시와 정렬될 때까지 돌려주고, 그 후에 부드럽게 제품 헤드를 들어 올립니다.
- 작은 브러시를 사용하여 칼날에 쌓인 이물질들을 없애주세요.
- 블레이드를 흐르는 물 아래에 행굽니다.
- 트리머의 손잡이는 물에 접촉하거나 담그지 않아야 합니다. 대신 물과 약한 세제로 적시어 축축한 천으로 닦아주세요
- 청소 후에는 물기를 털어내고 트리밍 칼날의 머리를 건조시킨 후 손잡이에 다시 부착하세요.
- 블레이드를 다시 부착하기 위해 머리 부분의 'I' 표시를 본체의 '•' 표시와 정렬시킨 다음 시계 방향으로 회전하여 'I' 표시가 정렬되고 잠금되도록 하십시오. 트리머 손잡이는 절대로 물에 담그지 마십시오.

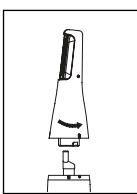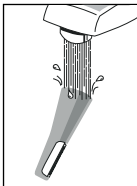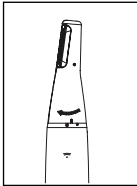

제조일 표기

제조일은 본 제품에 WVVYXXXX 형태로 표기되어 있습니다.

W는 '주', Y는 '년도'를 나타냅니다.

품질보증서

- 본 제품은 품질관리와 제품검사를 거쳐 출고됩니다.
- 사용자의 정상적인 사용상태에서 하자가 발생했을 경우 보증서의 내용 대로 1년 이내에 구입처나 A/S센터에서 제품교환 또는 무상서비스를 받으실 수 있습니다.
- 보증기간이더라도 비용을 받는 경우는 다음과 같습니다.
 - 사용자의 과오로 인한 하자 또는 파손인 경우
 - 부당한 수리 또는 개조로 인한 하자 또는 파손인 경우
 - 천재지변에 의한 하자 또는 파손인 경우
 - 구매 후 이동 또는 낙하등에 의한 하자 또는 파손인 경우
 - 사용설명서 내의 위험, 경고 또는 주의사항을 지키지 않아 발생한 하자인 경우
- 본 증서를 잘 보관하시고 서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

보증기간:	구입일로 부터 1년
제품명:	
모델명:	
구입일자:	
구입처(상호):	
고객성명:	성별 남 • 여
고객주소:	
전화번호:	

*본 사용설명서에 예시되어 있는 제품의 사양과 디자인은 예고 없이 변경될 수 있습니다.

수입 판매원

콘에어코리아트레이딩주식회사

소비자상담실: 1899-0209

A/S센터: 자사의 A/S대행업체인 필일렉 www.fillelec.co.kr의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)를 확인하세요