

BaByliss
PARIS

www.babylisskorea.com

BaByliss 전 제품은 프랑스 BaByliss에서 개발·디자인
되고 중국 현지 공장에서 생산되어, 다시 프랑스
BaByliss의 엄격한 품질검사 과정을 거친 제품입니다.

Conair Korea Trading Limited
#1304~1306 Seoul Soop Dream Tower, 66
Seongsui-ro, Seongdong-gu, Seoul, Korea

수입 판매원

콘에어코리아트레이딩주식회사
서울시성동구성수이로 66 서울숲드림타워
1304~1306호

A/S 대표 번호 : 1899-0209
자사의 A/S 전문대행업체인 필일렉
www.fillelec.co.kr 의 홈페이지를 통해서
가까운 A/S센터(전국 38개점)를 확인하세요

ST330K


IB-14/431D



2 IN 1 CURL - STRAIGHT & CURL - BABYLIS DIAMOND CERAMIC

Thank you for buying this product. BaByliss Diamond Ceramic is a high-density ceramic coating for professional use. The perfect glide and heat-transfer qualities guarantee softness, shine and protection of the hair. ST330K has the following features:

- BaByliss Diamond Ceramic professional plates flat to straighten/curved to curl: 28 mm x 100 mm (1)
- On/off switch - Automatic switch off (2)
- Operated indication light LED (3)
- Intense button: 2 positions (4)
- Protect button: 4 positions (5)
- Swivel cord (6)
- Floating plates : they make gliding and handling of the iron easier by applying constant pressure on the hair without damaging it (7)
- 2 in 1 function : from straightening to curling
- Ceramic Technology: fast heat up (235 °C)
- Locking system for optimal protection and storage

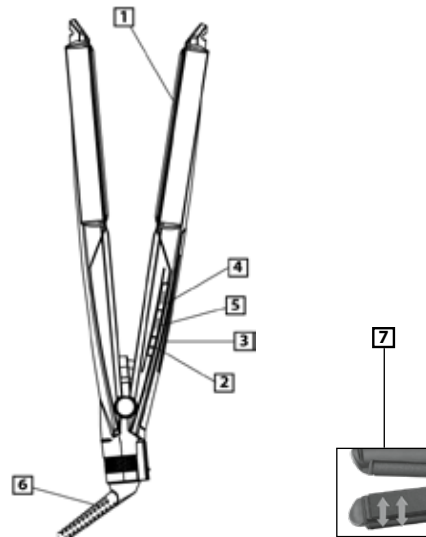

CURLING:

Take up a section about 2 to 3 cm wide and place it between the 2 heating plates, near the roots of your hair.



Turn the straightener 180° upwards or downwards, depending on the desired curl.



Slowly glide the straightener over the length of the section, from the roots to the tips.



Remove the straightener and use your fingers to twist the section again so that it takes its natural position.



Repeat if necessary. You may wish to set the curls using a light misting of hairspray.

STRAIGHTENING:

Plug in the appliance, switch on and allow to heat up. The default temperature is 200°C. The LED of the selected temperature blinks until the temperature is reached.

For a smooth straightening, press once on the Protect button and the straightener will reach 180°C; twice and the straightener will reach 160°C; three times and the straightener will reach 140°C; and four times and the straightener will reach 200°C. Press the same button again and the straightener will return to 180°C.

For an intense straightening, press once on the Intense button and the straightener will reach 220°C; twice and the straightener will reach 235°C. Press the same button again and the straightener will return to 220°C.

Thoroughly brush hair and section. Start with the underneath sections of hair. Take a section of about 5 cm width and place it between the 2 hot plates, being careful to avoid touching the hot surface of the appliance with your hand. Hold the hair firmly with the straightener and slide slowly along from the roots to the tips. Repeat again if necessary. Let the hair cool down before you comb it. After use, switch off and unplug the appliance. Allow to cool before storing away.

NOTES:

- The first time you use the unit, you may notice a little steam and a particular odor: this is common and will disappear the next time you use it. Note: When you are straightening, you might see some steam. Do not be concerned, this could be because of evaporation of the sebum, some residual hair products (leave-in hair care, hairspray, etc.) or excess water that is evaporating from your hair.
- Always select a lower temperature during the first use.
- It is possible to use a heat protection spray for optimal protection of the hair.
- If straightening is not effective enough, tighten the plates more firmly on your strand and let the appliance glide more slowly.

Temperature	Hair type
140 – 160 °C	Fine, bleached and/or damaged hair
160 – 180 °C	Normal, coloured and/or wavy hair
180 – 235 °C	Thick and/or very curly hair

AUTO SHUT-OFF

If the Straightener has been left on for over 1hr, the Straightener will automatically turn itself off.

USER MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.
12. To prevent damage to the cord, ensure it is stored without twisting or folding it.


THE DATE CODE MENTIONED

WVYYXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	04/22/2019
Customer	VS-Korea
Model No.	ST330K
Description	IB
Job No.	19BB028
Reference No.	IB-14/431D
Revision No.	0
Color	1C(BLACK) + 1C(BLACK)
Open Size	630mm(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Artpaper
Prepared by	Betty bai
Approved by	Jimmy Ng/ Jay Jeon
Vendor	MILLPLAN
Supplier	

折叠方法 Folding method: 12 pages (6 x 2)

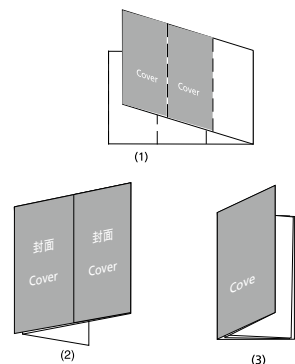


2 in 1 바비리스 다이아몬드 세라믹 스트레이트너

바비리스 제품을 구매해 주셔서 감사합니다.
바비리스 다이아몬드 세라믹 스트레이트너는 세라믹 코팅의 밀도를 높여 완벽한 슬라이딩과 높은 열전도율 뿐 만 아니라, 모발을 보호하면서 아름다운 스타일링을 연출하실 수 있습니다.

본 제품의 특징은 아래와 같습니다.

- 코팅 열판 사이즈 : 28 mm x 100 mm (1)
- On/Off 스위치 & 자동전원차단장치 (2)
- LED 온도 지시등 (3)
- 높은 온도 설정 버튼 (INTENSE) : 2단계 조절 (4)
- 적정 온도 설정 버튼 (PROTECT) : 4단계 조절 (5)
- 회전식 코드 (6)
- 매끄러운 열판 사용 : 사용 용이 및 스타일링 시 모발 손상 방지 (7)
- 2 in 1 기능 / 스트레이트닝 & 웨이브연출
- 세라믹 코팅법 : 빠른 예열 (235° C)
- 열판 보호를 위한 잠금 장치 탑재

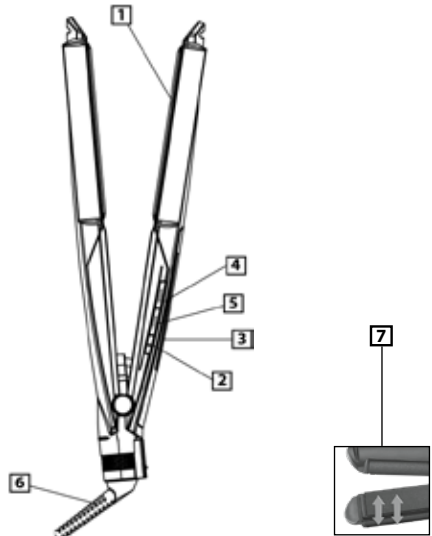

웨이브연출

- 모발을 2-3cm 정도로 잡아 열판 사이에 놓은 후, 뿌리 근처에서부터 천천히 스트레이트닝을 시작합니다.



- 원하는 컬 형태에 따라 기기를 180° 위 아래 방향으로 조절합니다.



- 모근 쪽부터 시작하여 서서히 기기를 내리면서 스트레이트닝 합니다.



- 스트레이트닝한 후에, 손으로 모발을 손질하여 주시면 보다 자연스러운 컬을 완성 하실 수 있습니다.



- 위 순서를 반복하면서 스타일링 하시면 됩니다.

스트레이트닝 연출법

기기를 예열시킨 후, 온도를 따로 설정하지 않을 경우, 기본온도는 200° C에 설정됩니다. 원하는 온도에 설정되면 붉은색 예열 지시등의 깜빡거림은 멈춥니다. 부드러운 스트레이트닝을

원하신다면 적정온도 설정버튼인 PROTECT 버튼을 아래 표기된 횟수만큼 눌러 원하는 온도를 설정합니다.

180° C : PROTECT X1
160° C ; PROTECT X2
140° C : PROTECT X3
** PROTECT X4를 시행할 경우, 기본온도인 200° C로 재 설정 됩니다.

강력한 스트레이트닝을 원하신다면 높은 온도 설정 버튼인 INTENSE 버튼을 아래 표기된 횟수 만큼 눌러 원하는 온도를 설정합니다.
220° C : INTENSE X1
235° C : INTENSE X2
** INTENSE X3를 시행할 경우, 220° C로 재 설정 됩니다.

모발 섹션은 5cm 정도 잡고 두 예열판 사이에 넣은 후 사용하시면 됩니다. 플레이트 표면이 뜨거우니 주의 하시기 바랍니다. 모발을 강하게 잡고 스트레이트기를 사용하시고 끝에 있는 팁을 잡고 아래로 천천히 내리시면서 스타일링 하시면 됩니다. 원하는 스타일링 시 위 내용을 반복하시면 됩니다. 빗질 하기 전에 모발을 식혀 줍니다. 사용 후에는 반드시 전원 버튼을 누르고 코드에서 분리해 주시면 됩니다.

주의

- 기기 처음 사용 시, 소량의 연기와 특정 입자의 냄새가 날 수 있으나 이는 제품 개봉 시에만 나타나는 일시적인 현상이나 사라집니다. 스타일링 과정에서 '치익'거리는 소리가 나거나 스팀이 생기는 것을 볼 수 있는 데, 이는 모발의 피지 물이나 헤어 에센스 등의 제품이 증발하는 과정에서 나타나는 현상이나 걱정하지 않으셔도 됩니다.
- 스타일링 시, 낮은 온도부터 올려가며 사용합니다.
- 모발 보호용 스프레이 사용이 가능합니다.
- 강한 스트레이트닝을 원하신다면 모발을 강하게 잡고 스트레이트기를 사용하시고 끝에 있는 팁을 잡고 아래로 천천히 내리시면서 스타일링 하시면 됩니다.

따른 온도 설정	모발 상태에
140 ~ 160 °C	얇은모발 혹은 탈색이나 손상된 모발
160 ~ 180 °C	보통 혹은 염색모발, 곱슬거리는 모발
180 ~ 235 °C	모발이 두껍거나 곱슬 심한 모발

자동 잠금 장치

한 시간 이상 전원이 켜 있을 경우, 자동적으로 전원이 꺼집니다.

제품 청소법

이 제품은 특별한 보수나 정비를 필요로 하지 않는 제품으로, 수증기 증발을 위해 나있는 구멍부분에 먼지가 끼거나 이물질이 들어가지 않도록 보관해주시면 됩니다. 제품을 청소해야 하는 경우에는 플러그를 뽑아 전원을 차단한 후 제품 차가운 상태에서 부드러운 천을 이용해 가볍게 닦아줍니다. 사용 중 이상이 발생할 경우 즉시 사용을 중지하고 전원을 차단한 후 바비리스 서비스 센터에 연락해 주십시오. 자체적인 수리나 개조를 시도하지 않습니다.

주의

코드에 생긴 손상이 제품 전체에 영향을 끼칠 수 있으니 코드를 잡아당기거나 꼬거나 구부리지 마시고 제품에 단단히 감지 않습니다. 코드 혹은 제품의 손상이 눈에 보이거나 제품 작동에 이상이 생길 경우 즉시 사용을 중단합니다.

보관방법

제품을 사용하지 않을 때에는 어린이의 손이 닿지 않는 건조한 곳에 보관합니다. 코드에 압력을 가하거나 갑자기 잡아당기지 않도록 합니다.

주요 안전 지침

제품사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하여야 합니다.

**사용 전, 반드시 사용설명서를 숙지하여 주십시오.
물에 접촉하거나 빠뜨리시면 안됩니다.**

안전주의

경고! 제품 포장에 사용된 폴리에틸렌재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이친대, 유모차, 어린이 놀이지역 안에서는 절대 사용하지 마십시오. 포장재는 장난감이 아닙니다. 얇은 막 물질이 코나 입에 붙어 유아나 어린이가 질식 될 수 있습니다.



경고! 이 제품을 욕조, 샤워장, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.



1. 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑아주십시오. 전원 스위치가 꺼져있더라도 물 근처에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 욕실의 잔류전류 용량은 30mA이하여야 합니다. 욕실 등에서 사용시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
2. 물과 같은 액체에 절대 담그지 마십시오.
3. 전원 코드가 손상되었을 경우 위험 방지를 위해 반드시 바비리스 서비스센터에 연락하여 수리를 받으셔야 안전 합니다.
4. 떨어지거나 손상된 기기는 사용하지 마십시오.
5. 플러그가 연결되어 있거나 전원이 켜진 상태로 기기를 방치해두지 마십시오.
6. 사용상에 문제가 발생하면 즉시 전원을 끄십시오.
7. 제조업체가 공급하는 부품 외의 부품은 사용하지 마십시오.
8. 제품 사용 후나 제품 세척 전에는 반드시 전원을 끄십시오.
9. 기기의 고온표면이 피부 (특히, 귀, 눈, 얼굴 및 목 부위)에 닿지 않도록 주의하셔야 합니다.
- 10.본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안되며, 사용시엔 반드시 안전을 책임지는 보호자의 지도로 사전 사용 설명 교육후 사용하도록 합니다. 특히, 어린이가 장난감처럼 사용하지 않도록 각별히 주의해 주십시오.
- 11.제품 보관 시에는 반드시 기기의 열기가 식은 상태에서 보관 하도록 합니다.
- 12.전원코드에 손상을 막기 위해 전선으로 기기를 감지마시고 꼬거나 접힌 상태로 보관하지 마십시오.

제조일 표기

제조일은 본 제품에 WYYYYXX 형태로 표기되어 있습니다. W 는 '몇 개 주', Y는 '몇 년도' 를 나타냅니다.

품질보증서

- 1 본 제품은 품질관리와 제품검사를 거쳐 출고됩니다.
- 2 사용자의 정상적인 사용상태에서 하자가 발생했을 경우 보증서의 내용 대로 1년 이내에 구입처나 A/S센터에서 제품교환 또는 무상서비스를 받으실 수 있습니다.
- 3 보증기간이더라도 비용을 받는 경우는 다음과 같습니다.
 - 사용자의 과오로 인한 하자 또는 파손인 경우
 - 부당한 수리 또는 개조로 인한 하자 또는 파손인 경우
 - 천재지변에 의한 하자 또는 파손인 경우
 - 구매 후 이동 또는 낙하등에 의한 하자 또는 파손인 경우
 - 사용설명서 내의 위험, 경고 또는 주의사항을 지키지 않아 발생한 하자인 경우
- 4 본 증서를 잘 보관하시고 서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

보증기간:	구입일로부터 1년
제품명:	
모델명:	
구입일자:	
구입처(상호):	
고객성명:	성별 남 • 여
고객주소:	
전화번호:	
*본 사용설명서에 예시되어 있는 제품의 사양과 디자인은 예고 없이 변경될 수 있습니다.	

수입 판매원
콘에어코리아트레이딩주식회사
서울시성동구성수일로 66 서울숲드림타워 1304~1306호
A/S 대표 번호 : 1899-0209
자사의 A/S 전문대행업체인 파일렉 www.filelec.co.kr 의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)를 확인하세요