BaByliss®
PARIS

www.babylisskorea.com

BaByliss 전 제품은 프랑스 BaByliss에서 개발·디자인
되고 중국 현지 공장에서 생산되어, 다시 프랑스
BaByliss의 엄격한 품질검사 과정을 거친 제품입니다.

Conair Far East Ltd.,
A Subsidary of Conair Corporate USA Conair
Corporation USA.,
1 Cummings Point Road, Stamford,
Connecticut 06902 USA

수입 판매원
콘에어코리아트레이딩주식회사
서울시성동구성수이로 66 서울숲드림타워
1304~1306호

A/S 대표 번호 : 1899-0209
자사의 A/S 전문대행업체인 필코텍 www.filelec.co.kr
의 홈페이지를 통해서
가까운 A/S센터(전국 38개점)를 확인하세요

2219K

IB-3/226J

BaByliss®
PARIS

BaByliss Instant Curl Iron
바비리스 인스탄트 컬 아이롱 설명서

19MM
CURLING TONGS

Ref.2219K

19 MM CURLING TONGS - INSTANT HEAT SETTING

These curling tongs allow to create professional curls easily, heat up very quickly and reach the selected in about one minute. 10 heat settings let you choose the temperature that is best for your type of hair texture: if you have fine hair, a low heat setting will produce the best results; if you have thick, wavy or resistant hair, use a higher heat setting.
The curling tongs have a built-in stand so that they can rest safely on surfaces, even when on. Also, the tip stays cool to prevent burns when you use it.

GET TO KNOW YOUR CURLING TONGS



HEAT SETTING GUIDE USE

Temp. Control	Hair Type
Low 1-4	Delicate, thin, easy to curl hair
Medium 5-7	Average to treated hair
High 8-10	Thick or wavy hair

- The red indicator will light up when the unit is plugged in and starts to heat up to the selected temperature.
- Use on dry or nearly dry hair. Divide your hair into equal sections and comb before curling. Press down on the clip lever, place the curling iron halfway up the section of hair and distribute the hair evenly between the clip and the barrel. Gently pull the curling iron down to the tips of your hair.
- To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember always place the spoon on top of a section when making a curl you want rolled under; place the spoon under the section when making a flip style.
- Wind the hair as far as you want it curled, being careful not to let the curling iron touch the scalp. Hold in place for a few seconds depending on the texture and length of your hair. Unroll once the hair is warm (not hot) to the touch. For tighter, bouncier curls, roll less hair. For loose, free-flowing curls, roll more hair.
- To remove the curling iron, press down on the clip lever to release your hair. To “set” the curl, wait until your hair has cooled before brushing or combing through.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

USER MAINTENANCE

Your curling iron is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING *KEEP AWAY FROM WATER*

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.
Never use them in cribs, children’s beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit’s hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.
12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

CONTINENTAL CONAIR LIMITED
CHINA CREATIVE DEPARTMENT

Date	05/29/2015
Customer	CKTL
Model No.	2219K
Description	IB
Job No.	15BB029
Reference No.	IB-3/226J
Revision No.	0
Color	1C(BLACK) + 1C(BLACK)
Open Size	450mm(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Artpaper
Prepared by	Betty bai
Approved by	Jimmy Ng/Elodie Lee
Vendor	MILLPLAN
Supplier	

折叠方法
Folding method:
12 pages (6 x 2)

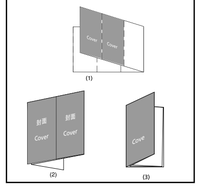

순간예열 19MM 컬링 아이론

컬링 아이론이 전문가의 손길이 닿은 듯한 스타일을 손쉽게 연출해 줍니다. 순간예열 기능으로 60초 이내에 설정한 온도에 달하며 10단계 온도 조절로 자신의 모발에 맞게 사용할 수 있습니다. 얇은 모발일 경우 저온, 굵은 모발일 경우 고온 설정이 적정합니다. 아이론이 보다 긴 열 지속과 고른 열 분포를 가능하게 하며 부드럽고 빛나는 스타일링을 하루 종일 유지해 줍니다. 어느 때라도 아이론을 내려 놓을 수 있는 거치대와 데임 방지 물팁이 내장되어 있어 자유로운 스타일링이 가능합니다.

제품의 특징

온도 조절 가이드

온도	모발 상태
저온 1-4	연약하고 얇은 모발, 컬링이 쉽게 나오는 모발
중온 5-7	보통 모발
고온 8-10	굵은 모발, 곱슬거리는 모발

- 플러그를 연결한 후 예열이 시작되면 붉은색 지시등이 점등됩니다.
- 건조된 혹은 조금 덜 마른 모발에 사용합니다. 사용 전, 모발을 빗으로 빗어 정돈한 후 모발을 나누어 핀으로 고정해주세요. 컬링 아이론 안에 다 들어갈 만큼의 모발을 잡아 중간쯤 아이론을 대고 집게를 열어 모발을 말아줍니다. 혹은 모발 끝을 집게 부분에 끼고 컬을 원하는 부위까지 말아 올려 줍니다.
- 안쪽으로 말린 컬을 만들 때는 아이론을 모발 위에, 바깥으로 말린 컬을 만들 대는 아이론을 모발 아래에 둔 상태에서 스타일링 합니다.
- 컬을 주고자 하는 길이만큼 아이론에 고정시켜 줍니다. 이 때 뜨거운 컬링 아이론 본체가 피부에 닿지 않도록 주의하십시오. 모발의 길이와 상태에 따라 5~10초간 기다린 후 풀어줍니다. 이때 모발이 뜨거워 질 때까지 열을 가하지 않도록 합니다. 더욱 탱탱하고 강한 컬을 만들기 위해서는 보다 적은 양의 모발을 감아줍니다.
- 컬링 아이론을 풀기 위해서는 집게 레버를 눌러 말려있던 모발을 내려줍니다. 컬을 고정시키기 위해서는 브러쉬나 빗질을 하기 전 컬링 한 모발이 식을 때까지 기다려 주세요.
- 사용 후에는 전원을 끄고 플러그를 뽑은 후 제품의 열기가 식은 상태에서 보관합니다.

사용자 주의 사항

본 제품은 별도의 유지 보수를 필요로 하지 않습니다. 윤활류 첨부를 필요로 하지 않습니다. 적절한 사용을 위해서는 제품을 반드시 깨끗한 상태로 유지 하여야 합니다. 청소가 필요한 경우, 전원을 끄고 제품이 차가워진 상태에서 마른 수건을 이용하여 닦아서 청소합니다. 만일 코드 또는 제품의 파손으로 작동 되지 않을 시에는 비닫사순 서비스 센터로 연락 하시어 수리하십시오. 소비자가 직접 제품을 수리하려 시도 하지 마십시오.

위험

절대로 전원 공급 장치 코드를 잡아 당기거나 꼬거나 또는말지 마십시오. 절대로 코드를 제품 주위에 말지 마십시오. 제품의 손상은 구부러지거나 잘려지는 데서 시작됩니다. 코드에 대해 손상되었는지 자주 검사하도록 합니다. 코드의 구부림과 단선은 제품 손상 및 파열의 주요원인이 됩니다.

보관

사용을 하지않을 때에는 반드시 안전하게 전원을 분리하고 아이들의 손에 닿지 않는 곳에 보관합니다.
코드로 제품 주위를 둘러서 말지 마십시오.

주요 안전 주의 사항

제품 사용 시 특히 어린이가 있을 경우 다음의 안전주의사항을 반드시 준수하셔야 합니다.

사용 전 반드시 사용설명서를 숙지하여 주십시오.
물에 접촉하거나 빠뜨리시면 안됩니다.

안전주의

경고: 제품 포장에 사용된 폴리에틸렌재질의 포장재는 어린이가 사용할경우 위험할수있습니다. 어린이의 손이 닿지않는 안전한 곳에 두십시오. 유아 및 어린이첨대, 유모차, 어린이 놀이지역 안에서는 절대사용하지 마십시오. 포장재는 장난감이 아닙니다. 얇은 막 물질이 코나 입에 붙어 유아나 어린이가 질식될수 있습니다.

경고: 이제품을 욕조, 사워장, 세면대 등 물이닿기 쉬운곳에서 사용하지 마십시오.

1. 부득이 물이 있는 곳에서 사용하실경우 사용후 반드시 플러그를 뽑아주십시오. 전원 스위치가 꺼져있더라도 물근처에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 욕실의 잔류전류 용량은 30mA이하여야 합니다. 욕실 등에서 사용시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
2. 물과 같은 액체에 절대 담그지 마십시오.
3. 전원 코드가 손상되었을 경우 위험방지를위해 반드시 바비리스서비스센터에 연락하여 수리를 받으셔야 안전합니다.
4. 떨어지거나 손상된 기기는 사용하지 마십시오.
5. 플러그가 연결되어 있거나 전원이 켜진 상태로 기기를 방치해두지 마십시오.
6. 사용상에 문제가 발생하면 즉시 전원을 끄십시오.
7. 제조업체가 공급하는 부품외의 부품은 사용하지마십시오.
8. 제품 사용후나 제품세척전에는 반드시 전원을 끄십시오.
9. 기기의 고온표면이 피부 (특히, 귀, 눈, 얼굴 및 목 부위)에 닿지 않도록 주의하셔야 합니다.
10. 본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안되며, 사용시엔 반드시 안전을 책임지는 보호자의 지도로 사전 사용설명교육후 사용하도록 합니다. 특히, 어린이가 장난감처럼 사용하지 않도록 각별히 주의해 주십시오.
11. 제품보관시에는 반드시 기기의 열기가 식은 상태에서 보관하도록 합니다.
12. 전원코드에 손상을 막기위해 전선으로 기기를 감지 마시고 꼬거나 접힌 상태로 보관하지 마십시오.

제조일 표기

제조일은 본제품에 WWYYXXX 형태로 표기되어 있습니다. W는 '몇 째 주' , Y는 '몇 년도' 를 나타냅니다.

품질보증서

1 본 제품은 품질관리와 제품검사를 거쳐 출고됩니다.
2 사용자의 정상적인 사용상태에서 하자가 발생했을 경우 보증서의 내용대로 1년 이내에 구입처나 A/S센터에서 제품교환 또는 무상서비스를 받으실 수 있습니다.
3 보증기간이더라도 비용을 받는 경우는 다음과 같습니다.
- 사용자의 과오로 인한 하자 또는 파손인 경우
- 부당한 수리 또는 개조로 인한 하자 또는 파손인 경우
- 천재지변에 의한 하자 또는 파손인 경우
- 구매 후 이동 또는 낙하등에 의한 하자 또는 파손인 경우
- 사용설명서 내의 위험, 경고 또는 주의사항을 지키지 않아 발생한 하자인 경우

4 본 증서를 잘 보관하시고 서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

보증기간: 구입일로 부터 1년

제품명:

모델명:

구입일자:

구입처(상호):

고객성명: 성별 남 · 여

고객주소:

전화번호:

*본 사용설명서에 예시되어 있는 제품의 사양과 디자인은 예고 없이 변경될 수 있습니다.

수입 판매원
콘에어코리아트레이딩주식회사
서울시성동구성수이로 66 서울숲드림타워 1304~1306호
A/S 대표 번호 : 1899-0209
자사의 A/S 전문대행업체인 필앙맥 www.filekec.co.kr 의 홈페이지를 통해서
가까운 A/S센터(전국 38개점)를 확인하세요