www.babylisskorea.com

Babyliss 전 제품은 프랑스 Babyliss에서 개발 • 디자인
되고 중국 현지 공장에서 생산되어, 다시 프랑스
Babyliss의 엄격함 품질검사 과정을 거친 제품입니다.

Conair Korea Trading Limited

수입 판매원
콘에어코리아트레이딩주식회사

소비자상담실: 1899-0209
A/S센터: 자사의 A/S대행업체인 필일렉
www.fillelec.co.kr의 홈페이지를 통해서 가까운
A/S센터(전국 38개점)을 확인하세요

ST970K

IB-22/295

REVERSABLE STYLER (2-IN-1 STRAIGHTENER/ WAVER)

리버서블 스타일러

ST970K

2-IN-1 HAIR STRAIGHTENING/WAVER

To get the best out of your new appliance, please read this user guide carefully before using it for the first time. We also recommend that you keep the instructions for future reference, so that you can remind yourself of the functions of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.
12. To prevent damage to the cord, ensure it is stored without twisting or folding it.
13. Always place the appliance with the stand, if any, on a heatresistant,stable flat surface.
14. Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.

This appliance is a 2-in-1 styler, the hot plate can be manually interchange into two working modes, straight plate and curl plate, suitable for users to straight hair and curl hair, one styler two purpose.

- Interchangeable hot plate: Straight and Curl
- On/Off switch button
- Plates lock function
- Temparature setting 140˚C, 160˚C, 180˚C and 200˚C
- 360˚ swivel cord
- 60 min auto-off

PRODUCT FEATURE

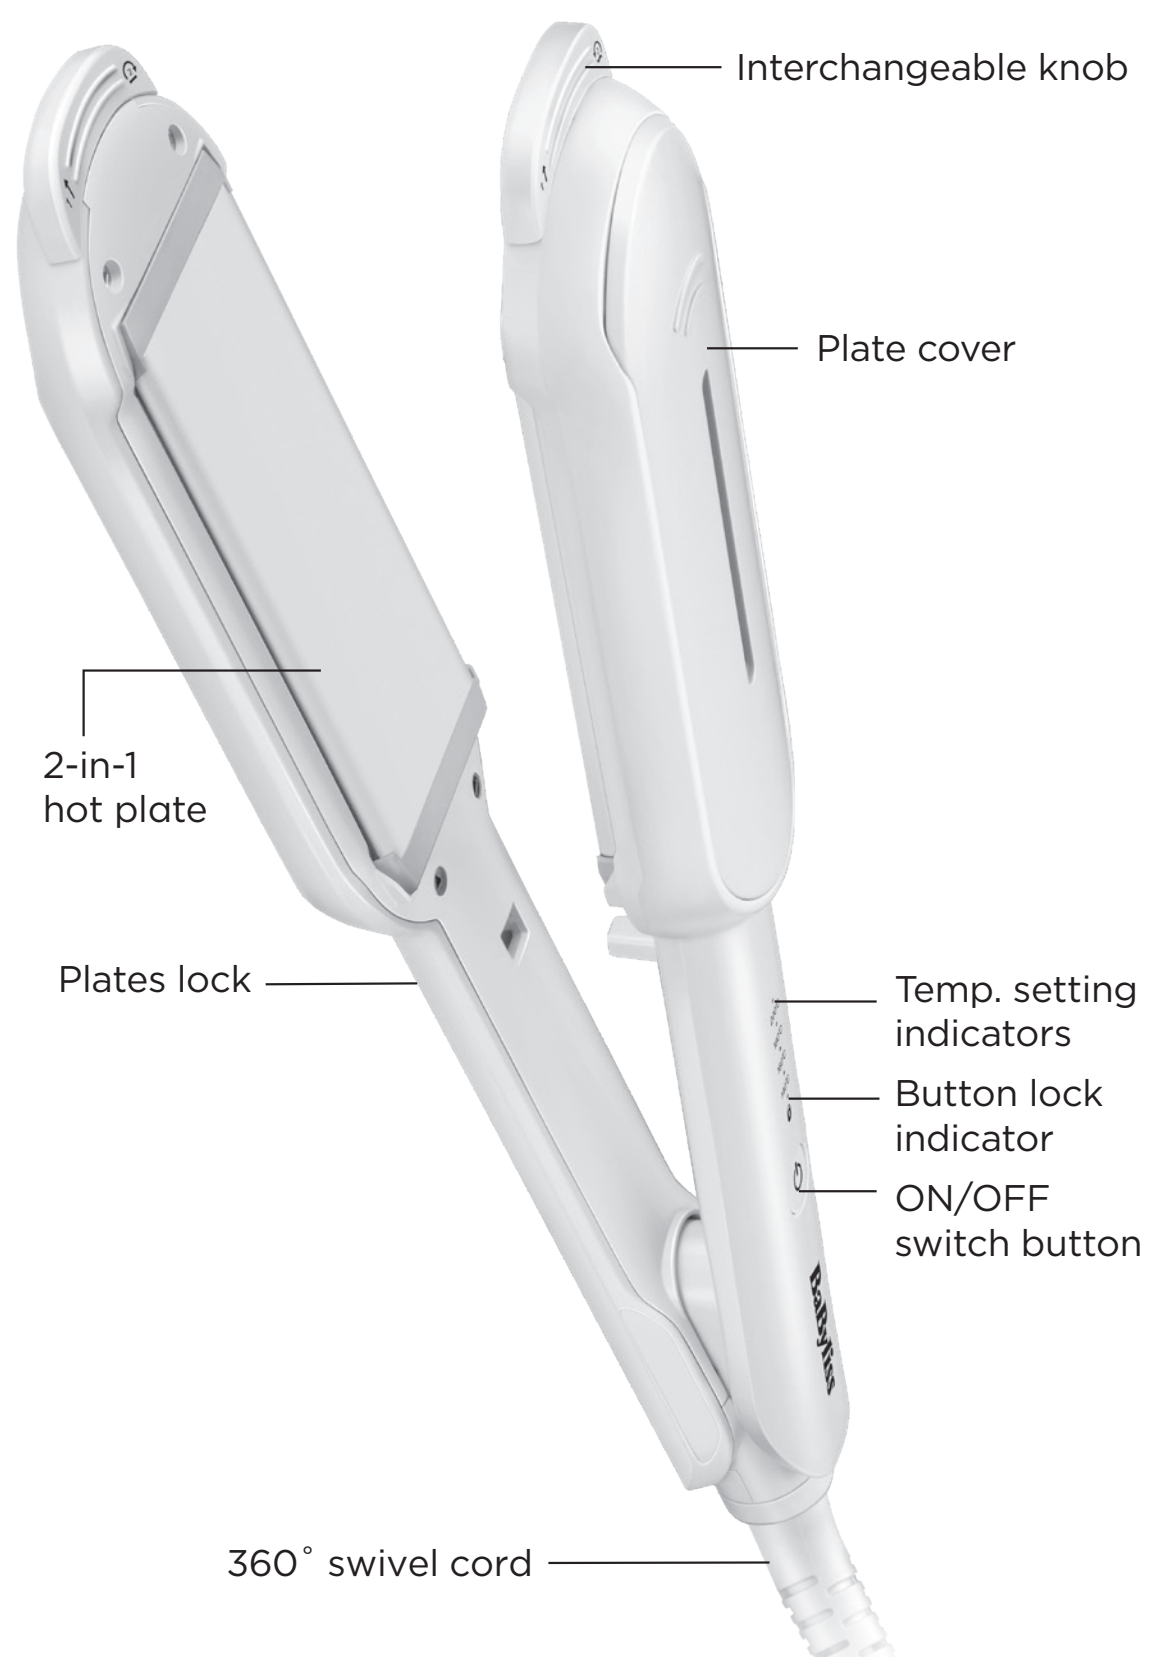

OPERATING INSTRUCTIONS

This styler is intended for household use.To turn on unit, plug into electrical outlet and press On/Off button to switch on. The default 180˚C setting will become illuminated and blinking, the setting LED will become solid when reached desired temperature. Press ON/OFF button to select the temperature setting, cycling throung 180˚C - 200˚C - 140˚C - 160˚C. To turn off the unit, press On/Off button 1-2 seconds again.

Never leave your styler unattended. However, should you fail to turn the unit off, it will automatically shut off within 60 minutes.

AUTOMATIC TEMPERATURE LOCK SYSTEM

This styler features an automatic temperature lock system. Immediately after turning on the styler, select the desired temperature. After the first 5 seconds of being switched on, the '⏻' button will automatically lock.
To adjust any setting, press the '⏻' button twice quickly, deactivating the lock mode. Then change temperatures setting, simply press the '⏻' button.
To turn off the styler whilst in lock mode, hold down the '⏻' button for 1-2 seconds until the unit switches off.

USE

Before using the appliance, make sure the hot plate for straight hair or curl hair:

Step 1: Take off the plate cover.

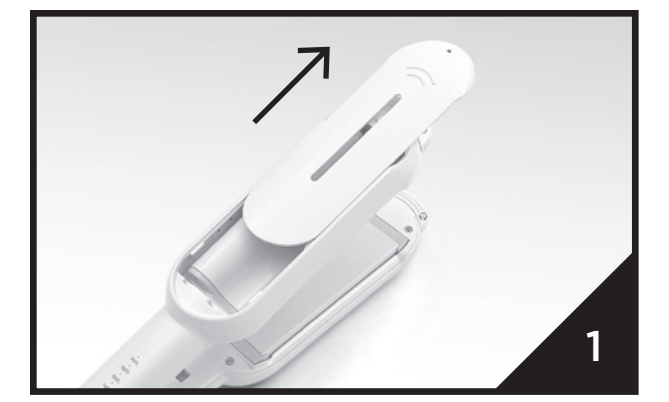

Step 2: Pull out the interchange knob about 2.5mm by hand as the symbo '1↑' on the interchange knob.

Step 3: When pulling out the interchange knob, please also rotate the hot plate 180˚ as the rotate direction showed '②'or '②', then release the knob.

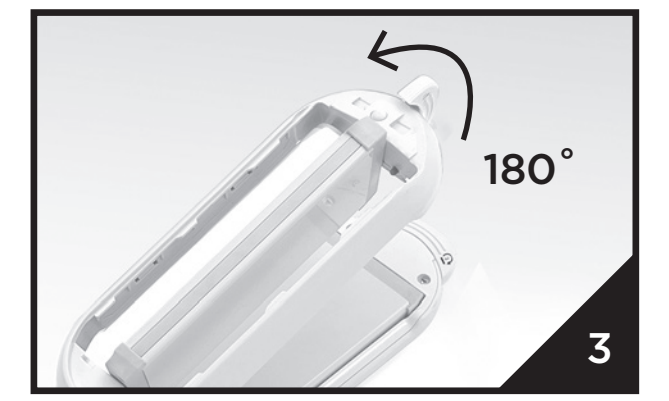

Step 4: Push back the plate cover. The other side hot plate need the same operation.

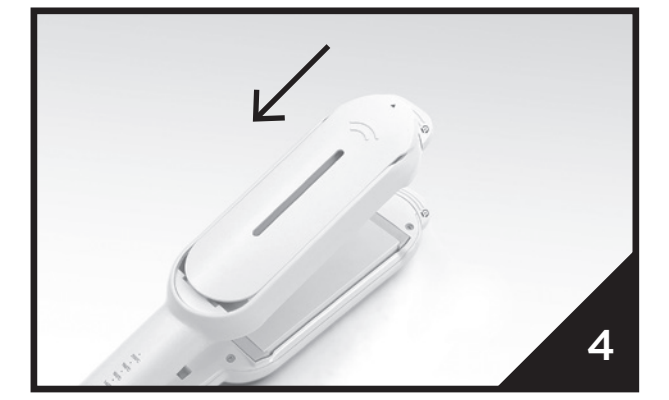

NOTE: No matter which plate can only operate 180 degrees back and forth, not 360 degrees rotation! So. if you go from curl hair to straight hair, rotate the hot plate 180°.

NOTE: Please must rotate the hot plate as the rotation symbol showed, wrong rotation direction will cause the unit damaged and unworkable.

AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply press the switch button to turn the power on again.

WARNING

The plates will get very hot within a few seconds and should not be placed in contact with the skin after the styler is turned ON .The special application of this styler will result in an extremely hot plates when the high setting is chosen. Always do a test styler before using the tong to insure the proper setting for your hair type.

USING THE HEAT SETTINGS

TEMPERATURE	HAIR TYPE
140ºC	Delicate, thin and easy to straighten hair
160ºC	Average to thick, or chemically treated hair
180ºC	Thick hair
200ºC	Coarse, hard-to-straighten hair

CARE AND MAINTENANCE

This appliance is intended for household use. Unplug product before cleaning. The product must be cleaned only when cool.
Use a soft non-abrasive cloth that is slightly dampened with water to wipe styling barrel surface. Do not allow water or any other liquid to get into the handle of the iron. Any other servicing should be performed by a qualified service center.
The product should not be stored while hot or plugged in. When not in use, allow curling iron to cool, then simply put back in the box and store out of reach of children in safe, dry location. Never wrap the cord around the curling iron. This could cause the cord to wear prematurely and break.

MAINTENANCE

Your styler is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.
However, in order to keep the best performance from your curling iron all the time, please note the following care instructions.

- Do not scratch the surface of the barrel with sharp objects or wipe with coarse material.
- Do not use this curling iron with strong chemicals, like perm lotions.
- Do not clean the barrel with strong cleaning agents. In most cases, mild detergent will be able to remove any stains or traces of styling products left on the barrel easily.
-

IMPORTANT

The warranty does not cover the ceramic coating due to natural peeling off after a long period of normal use.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

ONE YEAR LIMITED WARRANTY

This Appliance is guaranteed for consumer use for one year. Please fill in and return the Warranty Registration as instructed or log into www.conair-asia. com to register. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice. To obtain service under this warranty, please send in registration within one month of purchase through either one of the following ways.

THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

CONTINENTAL CONAIR LIMITED
CHINA CREATIVE DEPARTMENT

Date	1/17/2023
Customer	CKTL
Model No.	ST970K
Description	IB
Job No.	
Reference No.	IB-22/295
Revision No.	0
Color	1C(BLACK) + 1C(BLACK)
Open Size	900mm(W) X 165mm(H)
Folded Size	90mm(W) X 165mm(H)
Material	105 gsm matt Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong/ Johnny Xu/ Lynn Son
Vendor	YUELI
Supplier	

折叠方法
Folding method:
12 pages (6 x 2)

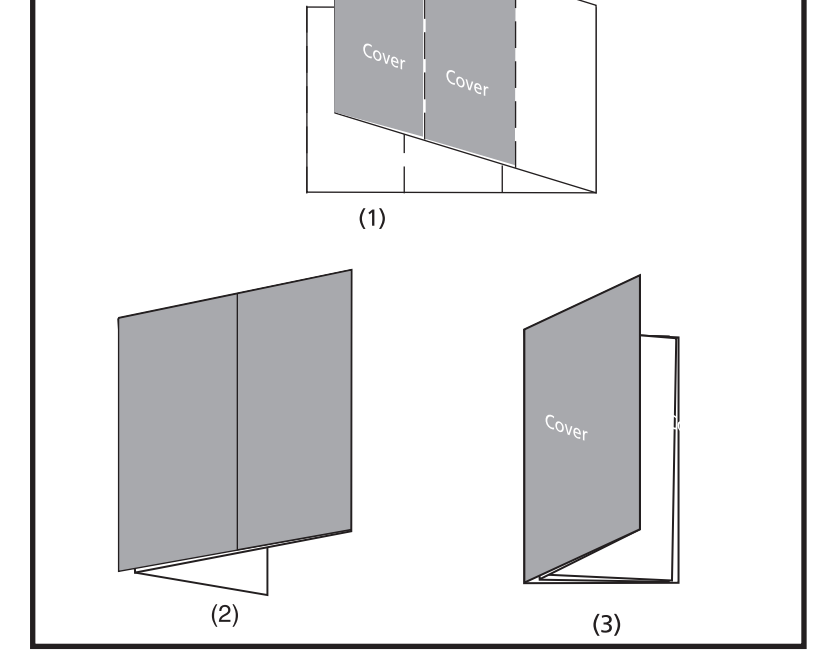

리버서블 스타일러 (투웨이 스타일링)

제품을 사용하기 전에 사용자 주의사항을 상세히 읽으시고 사용하시기 바랍니다.
또한 사용 설명서를 보관하시어 차후에 참고하시기 바랍니다.

사용 시 주의 사항

제품 사용 시, 특히 어린이가 있을 경우, 아래 안전 수칙을 포함한 기본 안전 수칙을 반드시 지켜 주십시오.

사용 전 반드시 사용설명서를 숙지하여 주십시오. 제품을 물에 닿게 하거나 빠뜨리시면 안됩니다.

주의 사항

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않도록 주의해 주십시오.
이 포장재를 유아용 침대, 유모차 또는 유아용 놀이 공간 등에서 사용하지 마십시오. 얇은 필름 막이 코나 입에 붙어 유아나 어린이가 질식될 수 있습니다. 포장재는 장난감이 아닙니다.

경고: 이 제품을 욕조, 샤워기, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.

1. 화장실에서 사용할 경우, 사용 후 반드시 플러그를 빼주십시오. 제품의 전원이 차단되어 있어도 물이 닿을 경우 위험할 수 있으니 안전을 위해 화장실에 누전차단기 설치를 권장합니다.
2. 물 또는 액체에 절대 빠트리시지 마십시오.
3. 전원 코드가 파손된 경우에는 위험요소를 피하기 위해 제조자나 그 대리점 또는 유자격자가 코드를 교체해야 합니다. 전원 코드가 파손된 경우 고객 상담실을 통해 상담하여 주십시오.
4. 제품에 이상이 있거나 손상된 것처럼 보이면 사용하지 마십시오. 제품을 떨어뜨리거나 강한 충격을 주지 마십시오.
5. 스위치를 켜 두거나 전원플러그를 꽂아 둔 상태에서 자리를 비우지 마십시오.
6. 사용 중 문제가 생기면 바로 전원플러그를 뽑으십시오.
7. 제조사에서 권고하지 않은 기타 부속품들을 사용하지 마십시오.
8. 제품 사용 후나 청소 하기 전 반드시 전원코드를 뽑으십시오.
9. 제품 사용 시 화상을 입을 수 있으니 열판 가까이에 피부(특히 귀, 눈, 얼굴, 목)가 직접 닿지 않도록 주의하십시오.
10. 신체, 감각, 정신 능력이 결여되어 있거나, 경험이나 지식이 부족하여 기기를 다루기 어려운 분들은 제품을 사용하지 말아주십시오(어린이 포함). 필요 시, 안전 책임자의 감독이나 지도 아래에서 사용하도록 해주십시오.
11. 제품 사용이 끝나면 식힌 후 보관합니다.
12. 제품 본체의 전선을 휘감거나 꼬거나 꺽어 보관하지 말아주십시오. 제품 손상의 우려가 있습니다.
13. 제품을 스탠드에 두시거나, 평평한 표면에 놓으십시오.
14. 화상 위험. 제품을 사용 중이거나 식힐 때에는 어린 아이들의 손이 닿지 않는 곳에 제품을 두십시오.

이 제품은 2 in 1 스타일러로 열판을 두가지 스타일링에 사용하실 수 있습니다(매직기 기능과 물결펌 고데기 기능) 뽑아서 돌리기만 하면 됩니다.

- 전환형 열판: 판고데기/ 물결펌 고데기
- 전원 ON/OFF 버튼
- 열판 잠금 장치
- 온도조절기능: 140, 160, 180, 200°
- 360도 회전식 코드
- 60분 자동전원차단

사용설명서

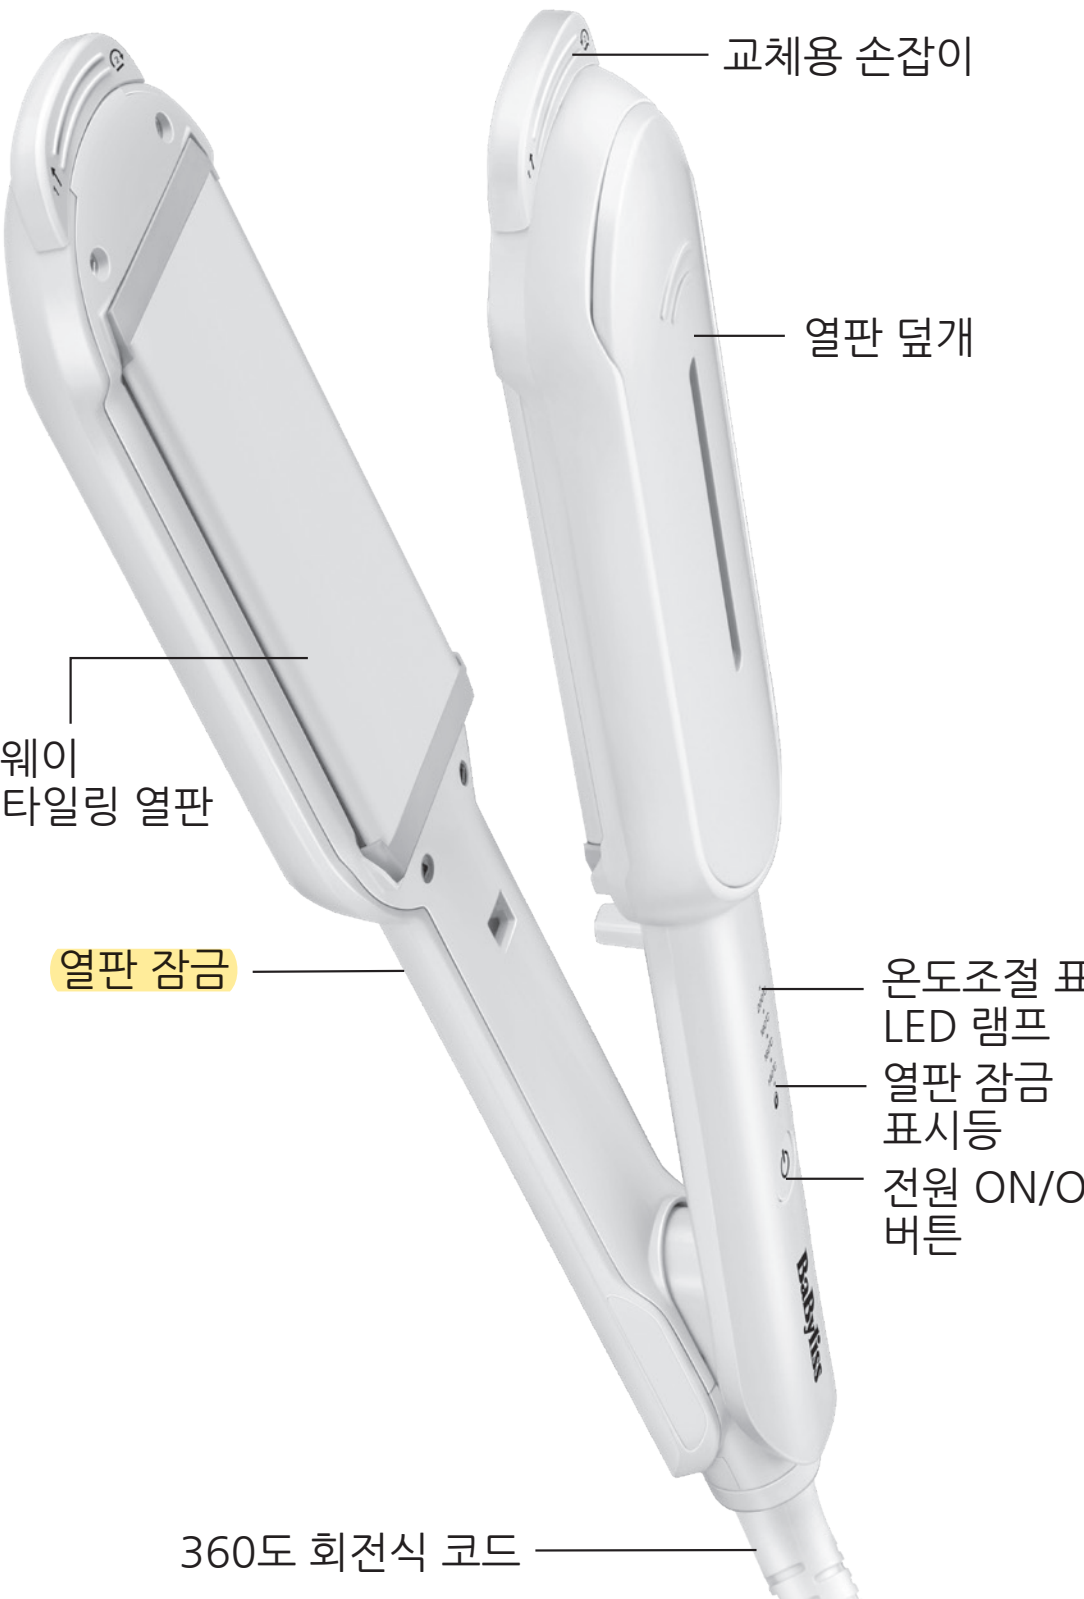

작동 방법

이 제품은 가정용으로 제작되었습니다. 제품을 켜시려면 전원 플러그에 꽂고 ON/ OFF 전원 버튼을 눌러 켜십시오. 180도 기본 설정이 되어있으며, 200도, 140도, 160도 이렇게 돌아갑니다. +/- 버튼으로 온도 조절을 하시면 됩니다. 사용 하신 후에는 1~2초 전원버튼을 누르시면 전원이 꺼집니다.

제품을 두고 자리를 비우지 마십시오. 다만, 전원을 끄지 않으셨을 때 전원 차단 기능이 적용되어 60분 후에 꺼집니다.

자동 온도 잠금 시스템

이 제품은 온도 자동 잠금이 설정되어 있습니다. 스타일러의 전원을 켜신 후에 원하시는 온도로 설정 한 후 5 초 후에 전원 버튼 '⏻'이 자동으로 잠기게 됩니다. 다른 설정으로 변경하시려면 전원 버튼 '⏻'을 두번 연속으로 누르시면 잠금 설정이 비활성화됩니다.
잠금모드 활성화 된 상태에서 전원을 끄고 싶으실 때, 1-2초간 전원 '⏻' 버튼을 누르시어 전원을 끄십시오.

사용 방법

스타일링 전, 어떤 스타일링을 할 지 먼저 정해두시기 바랍니다.

1단계: 열판의 덮개를 화살표 방향으로 제거합니다.

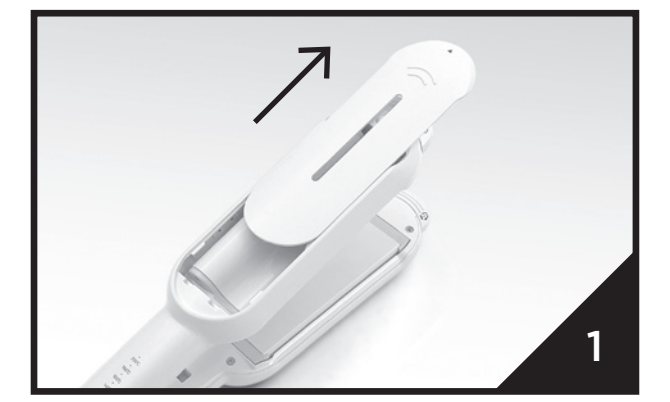

2단계: 교체용 손잡이를 사진과 같이 2.5MM 정도 위로 당겨 주십시오.

3단계: 손잡이를 위로 당긴 후 화살표와 같이 판고데기로 사용하실 거면 왼쪽으로 돌리시고, 물결펌 고데기로 사용하시려면 오른쪽으로 돌리십시오. 용도에 맞게 올바른 방향으로 돌려주셔야 합니다.

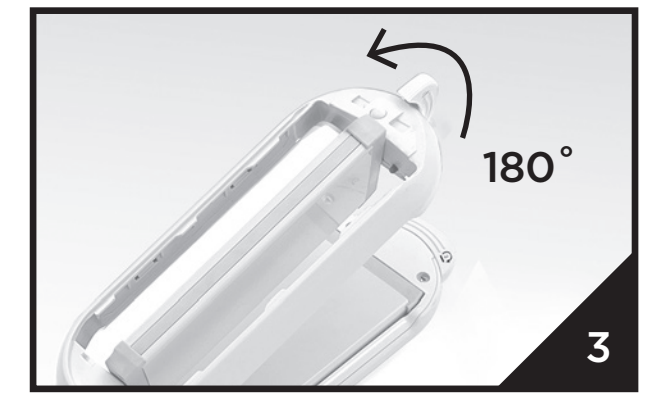

4단계: 열판 덮개를 다시 끼워주세요. 다른 쪽도 똑같이 해주시면 됩니다.

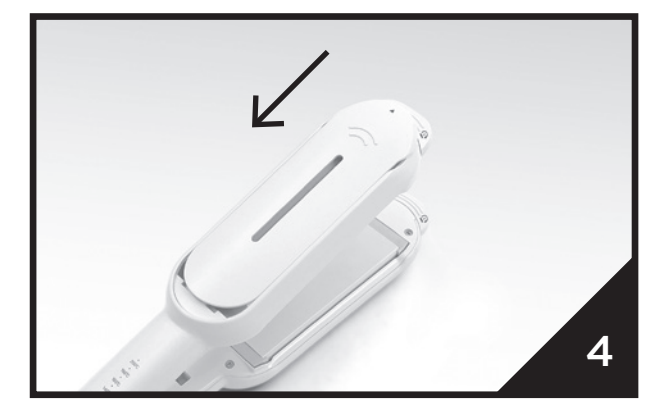

주의: 열판은 180도로만 돌아가며, 360도 회전이 되지 않으니 사용에 주의하십시오. 그러므로, 웨이브 스타일링을 할 것인지 스트레이트닝 스타일링을 할 것인지 정하셔서 맞는 쪽으로 회전시켜 주십시오.

주의: 사용 가이드에 따라 올바르게 돌리셔야 합니다. 잘못된 방향으로 돌리시면 제품이 망가질 수 있으니 주의 부탁드립니다.

자동 전원 차단

보다 안전한 사용을 위하여 본 기기에는 자동 전원 차단 기능이 있습니다. 60분 이상 본 제품을 사용하지 않을 시, 자동으로 전원이 차단됩니다. 전원 차단 후 다시 사용하시기 위해서는 전원 스위치를 다시 켜 주시기 바랍니다.

경고

전원을 켜신 후 곧바로 열판이 뜨거워지므로, 피부에 닿지 않도록 주의하십시오. 제품의 온도가 뜨거울수록 특히 더 조심하셔야 합니다. 제품 사용 전에 한번 테스트 해보시고 적절한 온도로 조절하서 사용하시면 됩니다.

모발상태에 따른 온도 설정

온도 설정	모발 상태
140°C	얇은 모발, 손상 모발, 염색 모발
160°C	일반 모발, 건강 모발
180°C	굵은 모발
200°C	심한 곱슬 모발, 잘 펴지지 않는 모발

사용자 주의 사항

본 제품은 별도의 유지 보수와 윤활유를 필요로 하지 않습니다. 제품을 반드시 깨끗한 상태로 유지해주시기 바랍니다. 청소가 필요한 경우, 전원을 끄고 제품이 차가워진 상태에서 천으로 닦아 청소합니다. 만일 코드 또는 제품의 파손으로 작동 되지 않을 시에는 서비스 센터로 연락하시어 수리하시기 바랍니다. 직접 제품을 수리하려고 하지 마십시오. 제품을 장기간 보관/유지하기 위해서는 다음사항을 준수하시기 바랍니다.

- 날카로운 물건으로 기기표면을 긁거나 거친 표면의 제품으로 닦지 마십시오.
- 파마약과 같은 강한 화학물질과 함께 사용하지 마십시오.
- 강한 세척제품으로 표면을 닦지 마십시오. 순한 세제만으로도 기기표면에 있는 대부분의 얼룩이 쉽게 제거됩니다.

중요

시간이 지남에 따라 마모되는 열판에 대해서는 보증기한이 적용되지 않습니다.

위험

절대로 전선을 잡아당기거나 구부리거나 꼬지 마십시오. 전선으로 기기를 세게 감지 마십시오.
이는 전선의 손상 및 파열, 합선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품 사용을 즉시 중단하시기 바랍니다.

보관

사용하지 않으실 때, 보관하기 용이합니다. 열이 완전히 식도록 한 후에 어린이의 손이 닿지 않는 안전하고 건조한 곳에 보관하십시오. 전원에서 분리할 때는 갑자기 잡아당기거나 너무 팽팽하게 전선을 잡아당기지 마시고 전선으로 제품을 감지 마십시오. 제품의 연결부위의 전선을 곧게 유지하여 자연스럽게 걸어두거나 놓아두도록 합니다.

1년 보증기간

본 제품은 1년의 보증기간을 제공합니다. 이에 옆의 보관서를 WWW.CONAIR-ASIA.COM 에 등록하십시오. 당사에 의하지 않은 수리나 부품교환은 당사가 책임지지 않으며, 제품을 정상적으로 사용하시다가 생기는 제품 하자에 의해서만 보증기간이 적용됩니다.

날짜코드

WWYYXXX는 제조 일자로서 W는 '주' 단위, Y는 '년' 단위를 나타냅니다.

품질보증서

1 본 제품은 품질관리와 제품검사를 거쳐 출고됩니다.
2 사용자의 정상적인 사용상태에서 하자가 발생했을 경우 보증서의 내용대로 1년 이내에 구입처나 A/S센터에서 제품교환 또는 무상서비스를 받으실 수 있습니다.
3 보증기간이더라도 비용을 받는 경우는 다음과 같습니다.
- 사용자의 과오로 인한 하자 또는 파손인 경우
- 부당한 수리 또는 개조로 인한 하자 또는 파손인 경우
- 천재지변에 의한 하자 또는 파손인 경우
- 구매 후 이동 또는 낙하등에 의한 하자 또는 파손인 경우
- 사용설명서 내의 위험, 경고 또는 주의사항을 지키지 않아 발생한 하자인 경우

4 본 증서를 잘 보관하시고 서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

보증기간: 구입일로 부터 1년
제품명:
모델명:
구입일자:
구입처(상호):

고객성명: 성별 남 • 여
고객주소:

전화번호:

*본 사용설명서에 예시되어 있는 제품의 사양과 디자인은 예고 없이 변경될 수 있습니다.

수입 판매원
콘에어코리아트레이딩주식회사

소비자상담실: 1899-0209
A/S센터: 자사의 A/S대행업체인 필일렉 www.fillelec.co.kr의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)을 확인하세요